

Revision G:

- Manual number of "Outdoor service manual MXZ-F·VF Series" listed in the cover has been revised.

OBH849 REVISED EDITION-F is void.

INDOOR UNIT


No. OBH849
REVISED EDITION-G

SERVICE MANUAL


Models

MSZ-BT20VG - [E1], [ER1], [ET1], [E2], [ER2], [ET2], [E3], [ER3], [ET3] **MSZ-BT20VGK** - [E1], [ET1], [E2], [ET2], [ER1], [E3], [ER2], [ET3]
MSZ-BT25VG - [E1], [ER1], [ET1], [E2], [ER2], [ET2], [E3], [ER3], [ET3] **MSZ-BT25VGK** - [E1], [ET1], [E2], [ET2], [ER1], [E3], [ER2], [ET3]
MSZ-BT35VG - [E1], [ER1], [ET1], [E2], [ER2], [ET2], [E3], [ER3], [ET3] **MSZ-BT35VGK** - [E1], [ET1], [E2], [ET2], [ER1], [E3], [ER2], [ET3]
MSZ-BT50VG - [E1], [ER1], [ET1], [E2], [ER2], [ET2], [E3], [ER3], [ET3] **MSZ-BT50VGK** - [E1], [ET1], [E2], [ET2], [ER1], [E3], [ER2], [ET3]

Outdoor unit service manual
MUZ-BT·VG Series (OBH850)
MXZ-F·VF Series (OBH790)

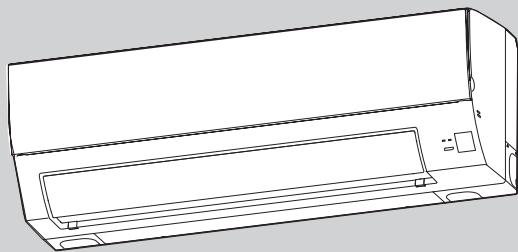

MSZ-BT25VG/VGK



CONTENTS

1. TECHNICAL CHANGES	3
2. PART NAMES AND FUNCTIONS	4
3. SPECIFICATION	5
4. NOISE CRITERIA CURVES	6
5. OUTLINES AND DIMENSIONS	7
6. WIRING DIAGRAM	9
7. REFRIGERANT SYSTEM DIAGRAM	15
8. SERVICE FUNCTIONS	16
9. MICROPROCESSOR CONTROL	18
10. TROUBLESHOOTING	22
11. DISASSEMBLY INSTRUCTIONS	37

PARTS CATALOG (OBB849)

Use the specified refrigerant only

Never use any refrigerant other than that specified.

Doing so may cause a burst, an explosion, or fire when the unit is being used, serviced, or disposed of.

Correct refrigerant is specified in the manuals and on the spec labels provided with our products.

We will not be held responsible for mechanical failure, system malfunction, unit breakdown or accidents caused by failure to follow the instructions.

<Preparation before the repair service>

- Prepare the proper tools.
- Prepare the proper protectors.
- Provide adequate ventilation.
- After stopping the operation of the air conditioner, turn off the power-supply breaker and pull the power plug.
- Discharge the capacitor before the work involving the electric parts.

<Precautions during the repair service>

- Do not perform the work involving the electric parts with wet hands.
- Do not pour water into the electric parts.
- Do not touch the refrigerant.
- Do not touch the hot or cold areas in the refrigeration cycle.
- When the repair or the inspection of the circuit needs to be done without turning off the power, exercise great caution not to touch the live parts.

WARNING

- When the refrigeration circuit has a leak, do not execute pump down with the compressor.
- When pumping down the refrigerant, stop the compressor before disconnecting the refrigerant pipes. The compressor may burst if air etc. get into it.
- When opening or closing the valve below freezing temperatures, refrigerant may spurt out from the gap between the valve stem and the valve body, resulting in injuries.

Revision A:

- MSZ-BT20/25/35/50VG - [ER1] have been added.

Revision B:

- MSZ-BT20/25/35/50VGK - [E1], [ET1] have been added.

Revision C:

- 10. TROUBLESHOOTING has been modified.

Revision D:

- MSZ-BT20/25/35/50VG - [E2], [ER2], [ET2] and MSZ-BT20/25/35/50VGK - [E2], [ET2] have been added.

Revision E:

- MSZ-BT20/25/35/50VGK - [ER1] have been added.

Revision F:

- MSZ-BT20/25/35/50VG - [E3], [ER3], [ET3] and MSZ-BT20/25/35/50VGK - [E3], [ER2], [ET3] have been added.

Revision G:

- Manual number of "Outdoor service manual MXZ-F·VF Series" listed in the cover has been revised.

The following models are compatible with the outdoor units with low standby power control.

Connecting the following models to the MUZ-BT·VG series outdoor units enables the low standby power control.

The following models may be connected to the MUZ-BT·VG series after once connected to the MXZ series and operated, for example because of relocation. In that case, the MUZ-BT·VG series outdoor units will not operate without taking a step. Follow the procedure "Deleting the memorized abnormal condition" described in 10-2.1.

MSZ-BT20VG - ☐ E1, ☐ ER1, ☐ ET1

MSZ-BT25VG - ☐ E1, ☐ ER1, ☐ ET1

MSZ-BT35VG - ☐ E1, ☐ ER1, ☐ ET1

MSZ-BT50VG - ☐ E1, ☐ ER1, ☐ ET1

MSZ-BT20VGK - ☐ E1, ☐ ET1

MSZ-BT25VGK - ☐ E1, ☐ ET1

MSZ-BT35VGK - ☐ E1, ☐ ET1

MSZ-BT50VGK - ☐ E1, ☐ ET1

1. New model

MSZ-BT20VG - ☐ E1, ☐ ER1, ☐ ET1 → **MSZ-BT20VG** - ☐ E2, ☐ ER2, ☐ ET2

MSZ-BT25VG - ☐ E1, ☐ ER1, ☐ ET1 → **MSZ-BT25VG** - ☐ E2, ☐ ER2, ☐ ET2

MSZ-BT35VG - ☐ E1, ☐ ER1, ☐ ET1 → **MSZ-BT35VG** - ☐ E2, ☐ ER2, ☐ ET2

MSZ-BT50VG - ☐ E1, ☐ ER1, ☐ ET1 → **MSZ-BT50VG** - ☐ E2, ☐ ER2, ☐ ET2

MSZ-BT20VGK - ☐ E1, ☐ ET1 → **MSZ-BT20VGK** - ☐ E2, ☐ ET2

MSZ-BT25VGK - ☐ E1, ☐ ET1 → **MSZ-BT25VGK** - ☐ E2, ☐ ET2

MSZ-BT35VGK - ☐ E1, ☐ ET1 → **MSZ-BT35VGK** - ☐ E2, ☐ ET2

MSZ-BT50VGK - ☐ E1, ☐ ET1 → **MSZ-BT50VGK** - ☐ E2, ☐ ET2

1. Indoor electronic control P.C. board has been changed.

2. Air cleaning filter has been changed.

MSZ-BT20VGK - ☐ ER1

MSZ-BT25VGK - ☐ ER1

MSZ-BT35VGK - ☐ ER1

MSZ-BT50VGK - ☐ ER1

1. New model

MSZ-BT20VG - ☐ E2, ☐ ET2 → **MSZ-BT20VG** - ☐ E3, ☐ ET3

MSZ-BT25VG - ☐ E2, ☐ ET2 → **MSZ-BT25VG** - ☐ E3, ☐ ET3

MSZ-BT35VG - ☐ E2, ☐ ET2 → **MSZ-BT35VG** - ☐ E3, ☐ ET3

MSZ-BT50VG - ☐ E2, ☐ ET2 → **MSZ-BT50VG** - ☐ E3, ☐ ET3

1. Fire mark has been changed.

2. Installation plate has been changed.

3. Indoor electronic control P.C. board has been changed.

MSZ-BT20VGK - ☐ E2, ☐ ER1, ☐ ET2 → **MSZ-BT20VGK** - ☐ E3, ☐ ER2, ☐ ET3

MSZ-BT25VGK - ☐ E2, ☐ ER1, ☐ ET2 → **MSZ-BT25VGK** - ☐ E3, ☐ ER2, ☐ ET3

MSZ-BT35VGK - ☐ E2, ☐ ER1, ☐ ET2 → **MSZ-BT35VGK** - ☐ E3, ☐ ER2, ☐ ET3

MSZ-BT50VGK - ☐ E2, ☐ ER1, ☐ ET2 → **MSZ-BT50VGK** - ☐ E3, ☐ ER2, ☐ ET3

1. Fire mark has been changed.

2. Installation plate has been changed.


3. Indoor electronic control P.C. board has been changed.

4. Wi-Fi interface has been changed.

2

PART NAMES AND FUNCTIONS

MSZ-BT20VG MSZ-BT25VG MSZ-BT35VG MSZ-BT50VG
MSZ-BT20VGK MSZ-BT25VGK MSZ-BT35VGK MSZ-BT50VGK

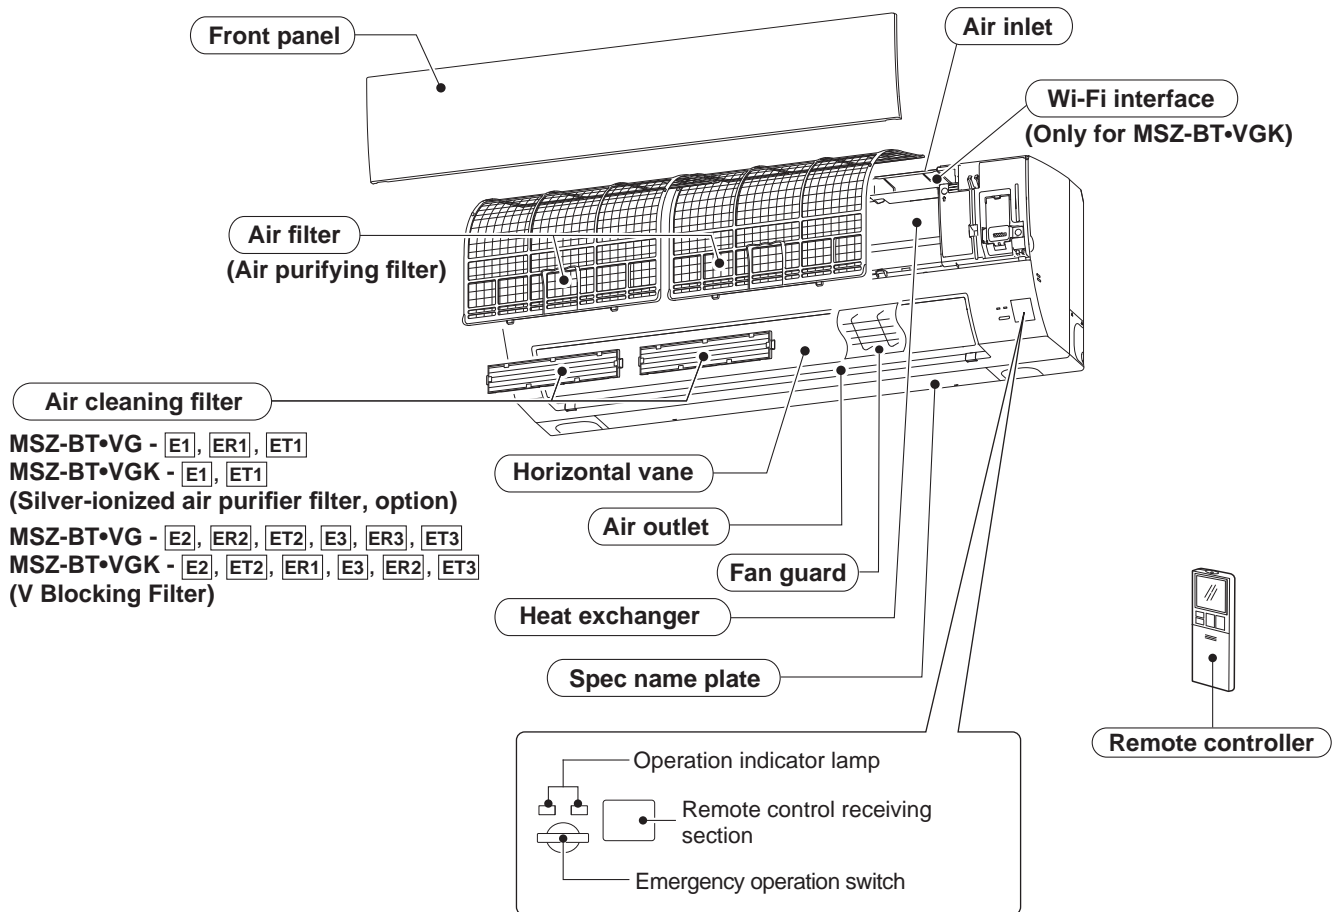

ACCESSORIES

Model	MSZ-BT20VG - [E1], [ER1], [ET1] MSZ-BT25VG - [E1], [ER1], [ET1] MSZ-BT35VG - [E1], [ER1], [ET1] MSZ-BT50VG - [E1], [ER1], [ET1] MSZ-BT20VGK - [E1], [ET1] MSZ-BT25VGK - [E1], [ET1] MSZ-BT35VGK - [E1], [ET1] MSZ-BT50VGK - [E1], [ET1]	MSZ-BT20VG - [E2], [ER2], [ET2], [E3], [ER3], [ET3] MSZ-BT25VG - [E2], [ER2], [ET2], [E3], [ER3], [ET3] MSZ-BT35VG - [E2], [ER2], [ET2], [E3], [ER3], [ET3] MSZ-BT50VG - [E2], [ER2], [ET2], [E3], [ER3], [ET3] MSZ-BT20VGK - [E2], [ET2], [ER1], [E3], [ER2], [ET3] MSZ-BT25VGK - [E2], [ET2], [ER1], [E3], [ER2], [ET3] MSZ-BT35VGK - [E2], [ET2], [ER1], [E3], [ER2], [ET3] MSZ-BT50VGK - [E2], [ET2], [ER1], [E3], [ER2], [ET3]
(1) Installation plate	1	1
(2) Installation plate fixing screw 4 × 25 mm	5	5
(3) Wireless remote controller	1	1
(4) Felt tape (For left or left-rear piping)	1	1
(5) Battery (AAA) for remote controller	2	2
(6) Air Cleaning Filter (V Blocking Filter)	-	2

Indoor model				MSZ-BT20VG MSZ-BT20VGK		MSZ-BT25VG MSZ-BT25VGK		MSZ-BT35VG MSZ-BT35VGK		MSZ-BT50VG MSZ-BT50VGK	
Power supply				Single phase 230 V, 50 Hz							
Electrical data	Power input *1	Cooling	W	19				31			
		Heating		24				37			
	Running current *1	Cooling	A	0.20				0.31			
		Heating		0.25				0.35			
Fan motor	Model			RC0J30-CV							
	Current *1	Cooling	A	0.20				0.31			
		Heating		0.25				0.35			
Dimensions W × H × D			mm	838 × 280 × 235							
Weight			kg	9.0							
Special remarks	Air direction			5							
	Airflow	Cooling	m³/h	654				792			
				522				660			
				408				540			
				312				456			
				252				378			
		Heating		714				846			
				540				714			
				408				594			
				300				468			
				252				360			
	Sound level	Cooling	dB(A)	43				46			
				37				38		40	
				30				31		36	
				22				33			
				19				29			
		Heating		43				44		48	
				37				43			
				30				38			
				23				33			
				20				29			
	Fan speed	Cooling	rpm	990				1,150			
				840				1,000			
				700				860			
				580				760			
				500				660			
		Heating		1,060				1,210			
				860				1,060			
				700				920			
				560				770			
				500				640			
	Fan speed regulator			5							
Remote controller model			ZH19A								

NOTE: Test conditions are based on ISO 5151.

Cooling: Indoor Dry-bulb temperature 27°C Wet-bulb temperature 19°C

Outdoor Dry-bulb temperature 35°C

Heating: Indoor Dry-bulb temperature 20°C

Outdoor Dry-bulb temperature 7°C Wet-bulb temperature 6°C


*1 Measured under rated operating frequency.

Specifications and rated conditions of main electric parts


Model		MSZ-BT20/25/35/50VG MSZ-BT20/25/35/50VGK
Fuse	(F11)	T3.15AL250V
Horizontal vane motor	(MV)	12 V DC
Varistor	(NR11)	470 V
Terminal block	(TB)	3P

MSZ-BT20VG
MSZ-BT20VGK


FUNCTION	SPL(dB(A))	LINE
COOLING	43	● — ●
HEATING	43	□ - - □

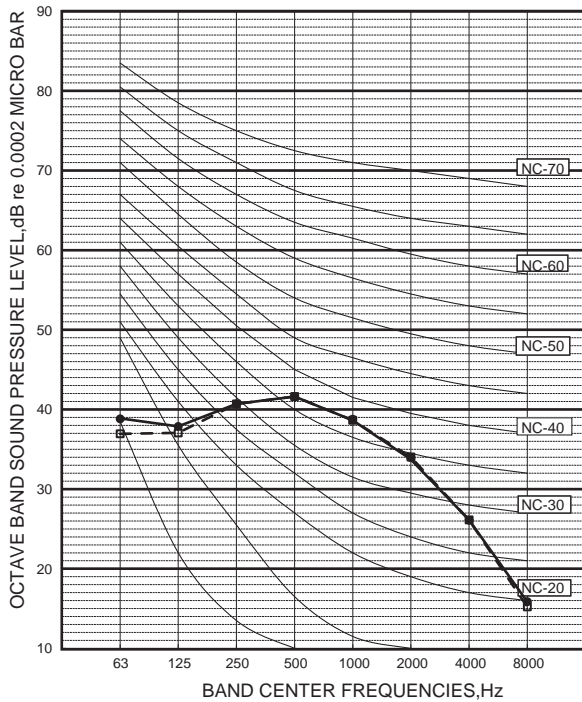
MSZ-BT25VG
MSZ-BT25VGK


FUNCTION	SPL(dB(A))	LINE
COOLING	43	● — ●
HEATING	43	□ - - □

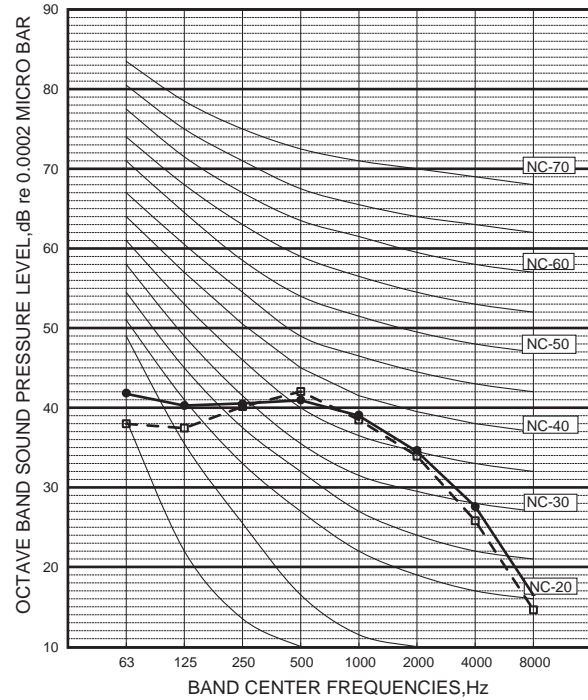
MSZ-BT35VG
MSZ-BT35VGK


FUNCTION	SPL(dB(A))	LINE
COOLING	46	● — ●
HEATING	44	□ - - □

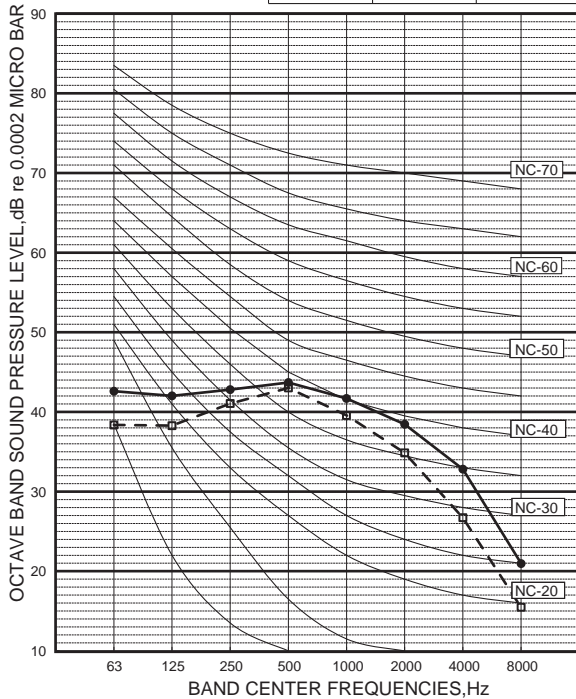
MSZ-BT50VG
MSZ-BT50VGK

FUNCTION	SPL(dB(A))	LINE
COOLING	46	● — ●
HEATING	48	□ - - □

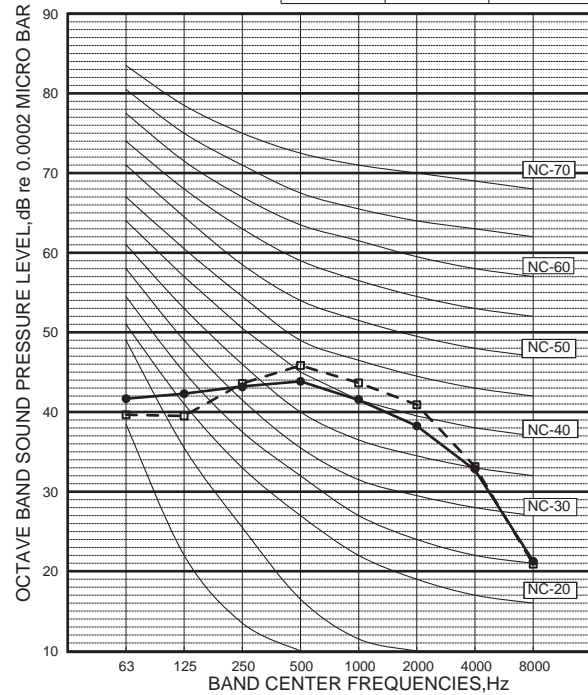
Test conditions

Cooling: Dry-bulb temperature 27°C
Wet-bulb temperature 19°C
Heating: Dry-bulb temperature 20°C

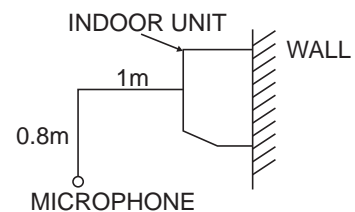

MSZ-BT20VG - [E1], [ER1], [ET1], [E2], [ER2], [ET2]

MSZ-BT25VG - [E1], [ER1], [ET1], [E2], [ER2], [ET2]

MSZ-BT35VG - [E1], [ER1], [ET1], [E2], [ER2], [ET2]

MSZ-BT50VG - [E1], [ER1], [ET1], [E2], [ER2], [ET2]


MSZ-BT20VGK - [E1], [ET1], [E2], [ET2], [ER1]

MSZ-BT25VGK - [E1], [ET1], [E2], [ET2], [ER1]

MSZ-BT35VGK - [E1], [ET1], [E2], [ET2], [ER1]

MSZ-BT50VGK - [E1], [ET1], [E2], [ET2], [ER1]

Unit: mm

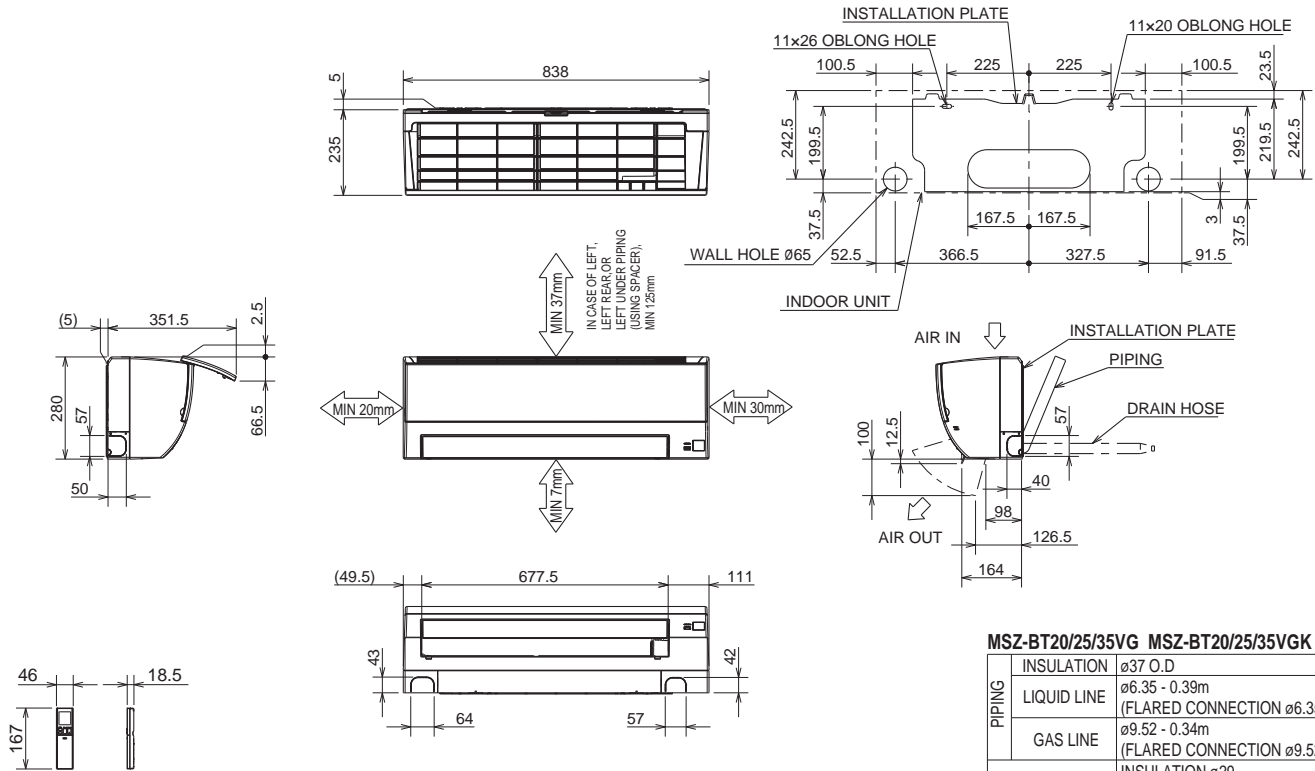


MSZ-BT20/25/35VG MSZ-BT20/25/35VGK

PIPING	INSULATION	ø37 O.D
	LIQUID LINE	ø6.35 - 0.39m (FLARED CONNECTION ø6.35)
	GAS LINE	ø9.52 - 0.34m (FLARED CONNECTION ø9.52)
DRAIN HOSE		INSULATION ø29 CONNECTED PART ø16 O.D

MSZ-BT50VG MSZ-BT50VGK

PIPING	INSULATION	ø37 O.D
	LIQUID LINE	ø6.35 - 0.39m (FLARED CONNECTION ø6.35)
	GAS LINE	ø9.52 - 0.34m (FLARED CONNECTION ø12.7)
DRAIN HOSE		INSULATION ø29 CONNECTED PART ø16 O.D

MSZ-BT20VG - E3, ER3, ET3 **MSZ-BT20VGK** - E3, ER2, ET3
MSZ-BT25VG - E3, ER3, ET3 **MSZ-BT25VGK** - E3, ER2, ET3
MSZ-BT35VG - E3, ER3, ET3 **MSZ-BT35VGK** - E3, ER2, ET3
MSZ-BT50VG - E3, ER3, ET3 **MSZ-BT50VGK** - E3, ER2, ET3

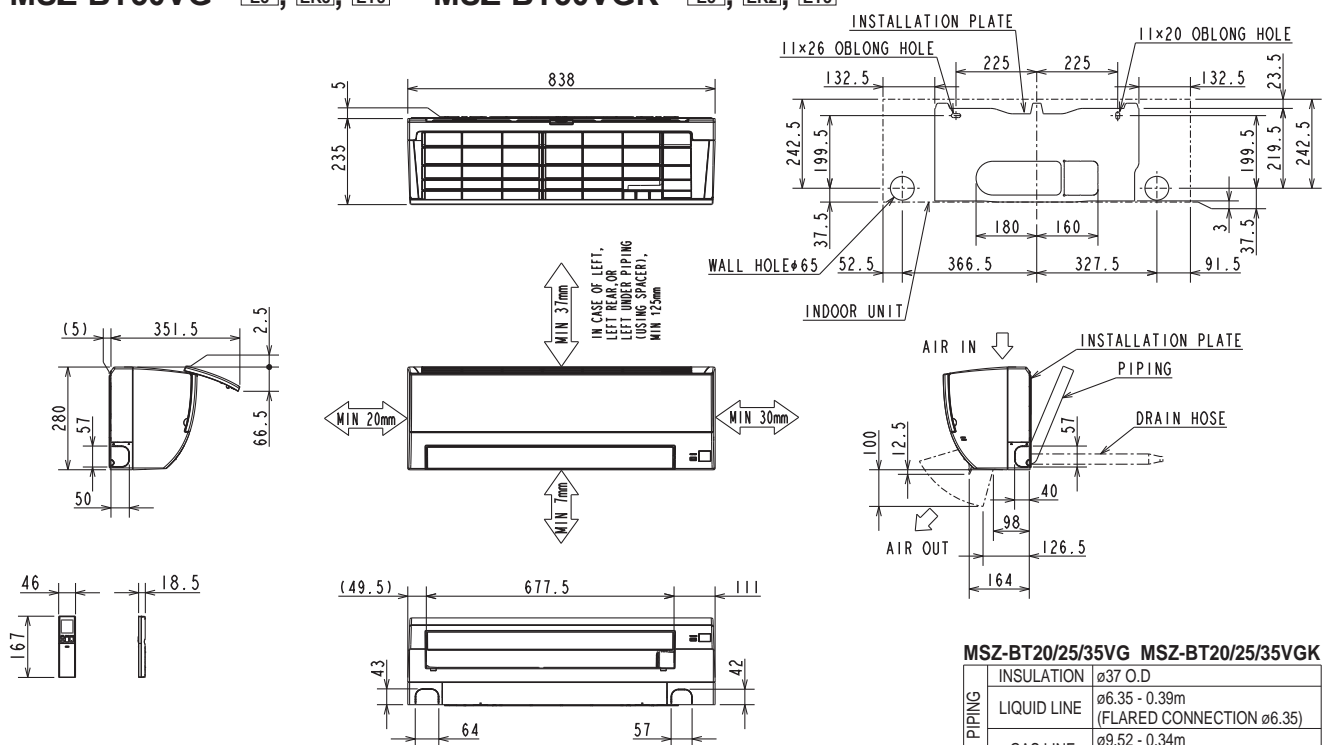

MSZ-BT20/25/35VG MSZ-BT20/25/35VGK

PIPING	INSULATION	ø37 O.D
	LIQUID LINE	ø6.35 - 0.39m (FLARED CONNECTION ø6.35)
	GAS LINE	ø9.52 - 0.34m (FLARED CONNECTION ø9.52)
DRAIN HOSE		INSULATION ø29 CONNECTED PART ø16 O.D


MSZ-BT50VG MSZ-BT50VGK

PIPING	INSULATION	ø37 O.D
	LIQUID LINE	ø6.35 - 0.39m (FLARED CONNECTION ø6.35)
	GAS LINE	ø9.52 - 0.34m (FLARED CONNECTION ø12.7)
DRAIN HOSE		INSULATION ø29 CONNECTED PART ø16 O.D

6


WIRING DIAGRAM

MSZ-BT20VG- [E1], [ER1] MSZ-BT25VG- [E1], [ER1] MSZ-BT35VG- [E1], [ER1] MSZ-BT50VG- [E1], [ER1]

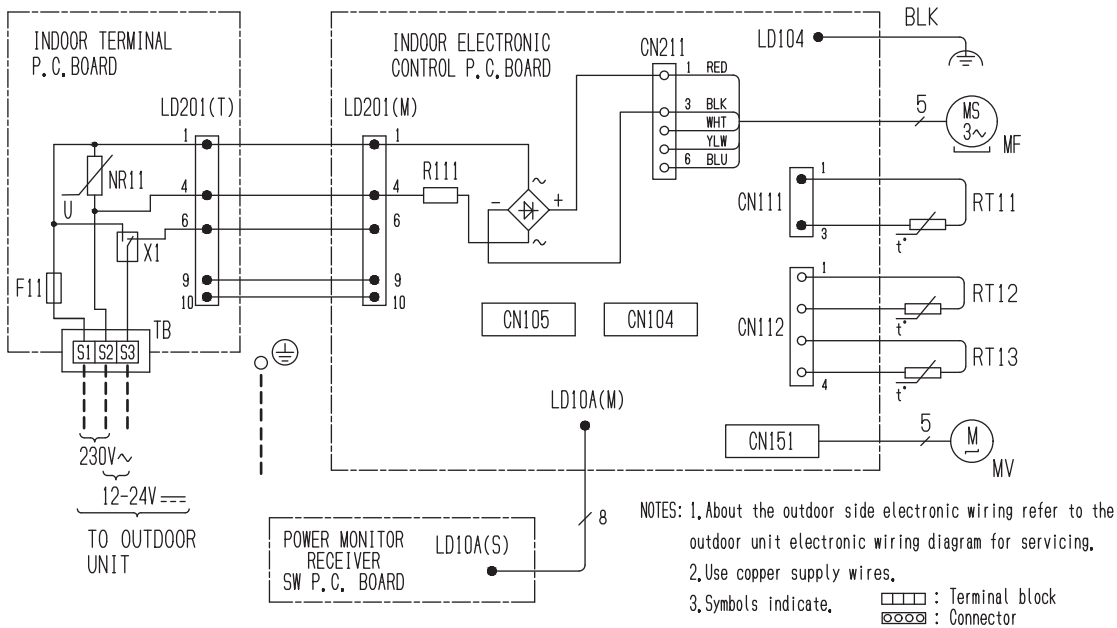


SYMBOL	NAME
F11	FUSE (T3, 15AL250V)
MF	FAN MOTOR
MV	VANE MOTOR (HORIZONTAL)
NR11	VARISTOR
R111	RESISTOR
RT11	ROOM TEMP. THERMISTOR
RT12	COIL TEMP. THERMISTOR (MAIN)
RT13	COIL TEMP. THERMISTOR (SUB)
TB	TERMINAL BLOCK
X1	RELAY

MSZ-BT20VG- [E2], [ER2] MSZ-BT25VG- [E2], [ER2] MSZ-BT35VG- [E2], [ER2] MSZ-BT50VG- [E2], [ER2]

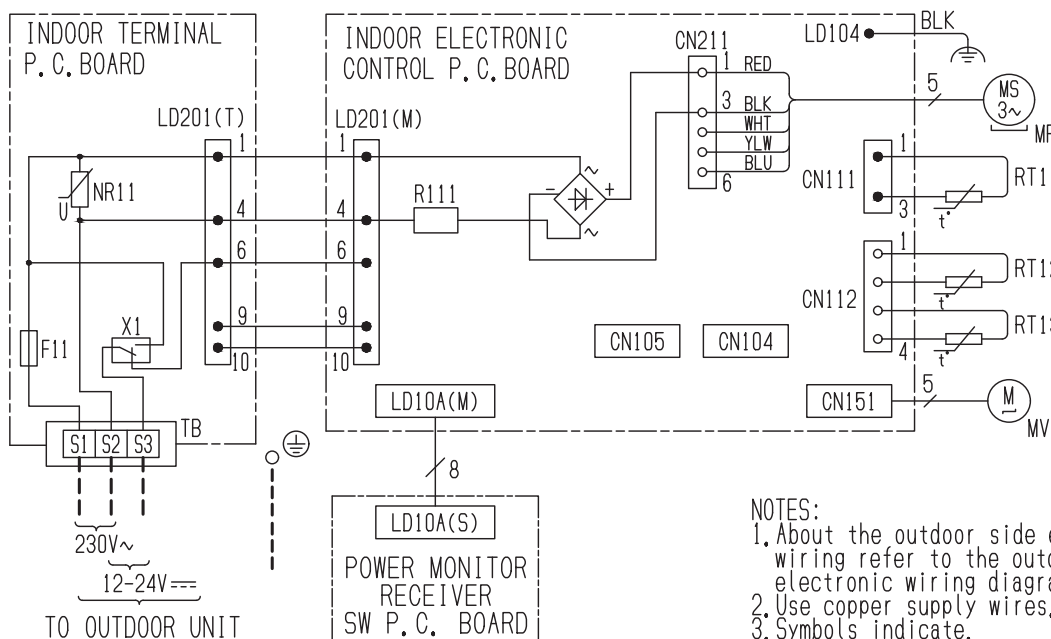


SYMBOL	NAME
F11	FUSE (T3, 15AL250V)
MF	FAN MOTOR
MV	VANE MOTOR (HORIZONTAL)
NR11	VARISTOR
R111	RESISTOR
RT11	ROOM TEMP. THERMISTOR
RT12	COIL TEMP. THERMISTOR (MAIN)
RT13	COIL TEMP. THERMISTOR (SUB)
TB	TERMINAL BLOCK
X1	RELAY

MSZ-BT20VG- **MSZ-BT25VG-** **MSZ-BT35VG-** **MSZ-BT50VG-**


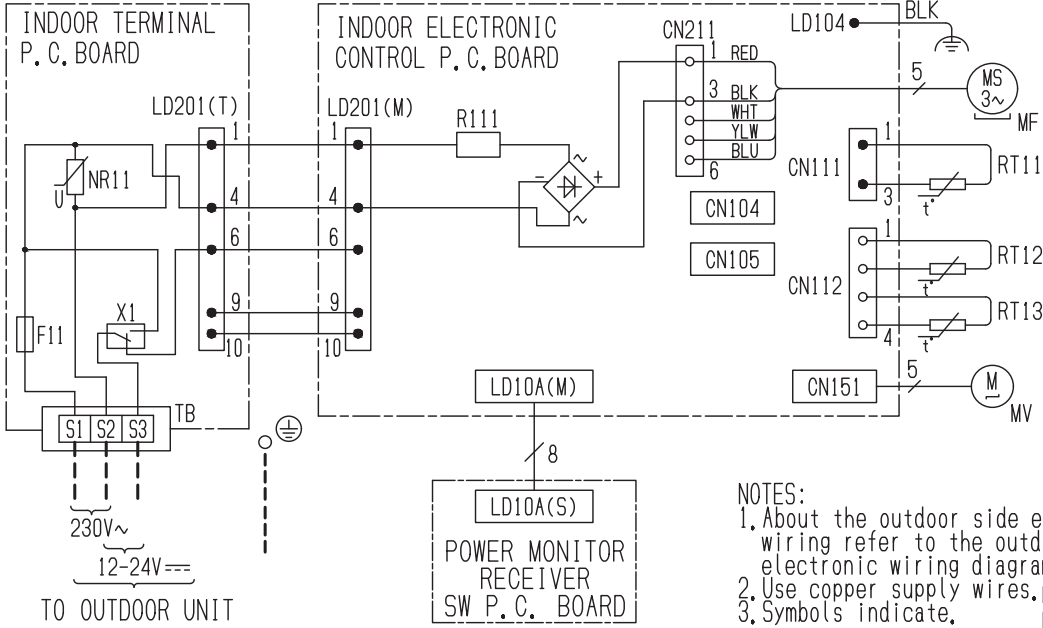


SYMBOL	NAME
F11	FUSE (T3, 15A/250V)
MF	FAN MOTOR
MV	VANE MOTOR (HORIZONTAL)
NR11	VARISTOR
R111	RESISTOR
RT11	ROOM TEMP. THERMISTOR
RT12	COIL TEMP. THERMISTOR (MAIN)
RT13	COIL TEMP. THERMISTOR (SUB)
TB	TERMINAL BLOCK
X1	RELAY


MSZ-BT20VG- **MSZ-BT25VG-** **MSZ-BT35VG-** **MSZ-BT50VG-**

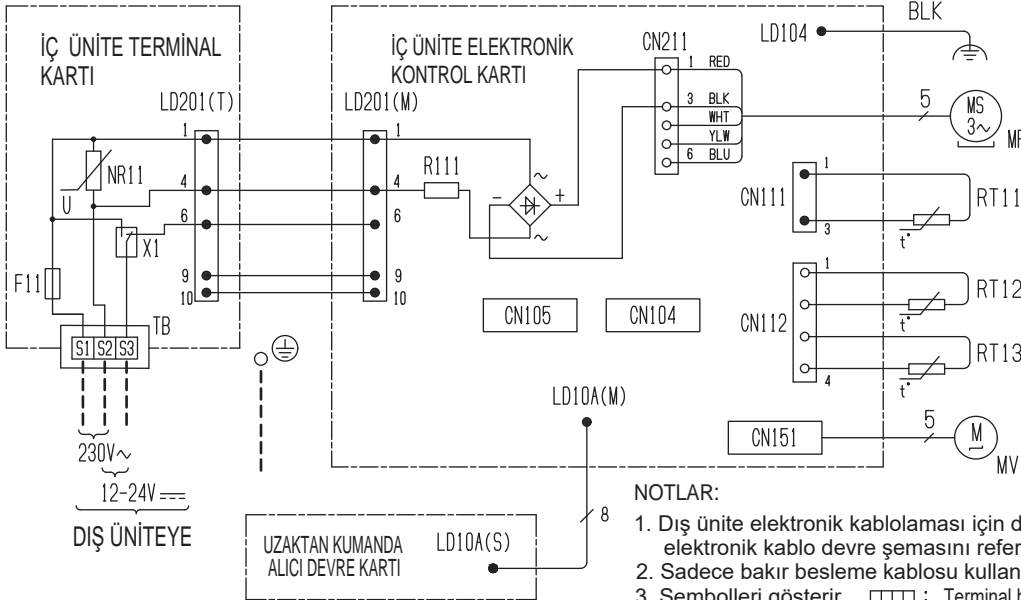


SEMBOL	PARÇA ADI
F11	SİGORTA (T3, 15A/250V)
MF	FAN MOTORU
MV	KANAT MOTORU (YATAY)
NR11	VARİSTÖR
R111	RESİTÖR
RT11	ODA SICAKLIK TERMİSTÖRÜ
RT12	BORU SICAKLIK TERMİSTÖRÜ (ANA)
RT13	BORU SICAKLIK TERMİSTÖRÜ (YARDIMCI)
TB	TERMINAL BLOĞU
X1	RÖLE

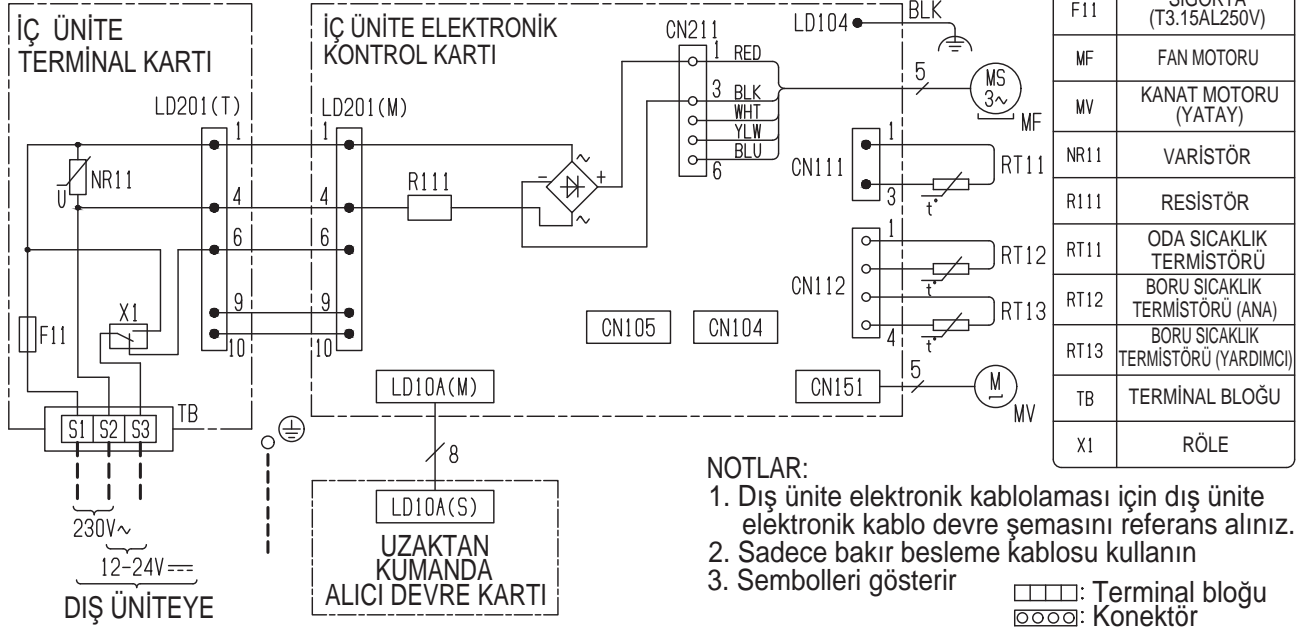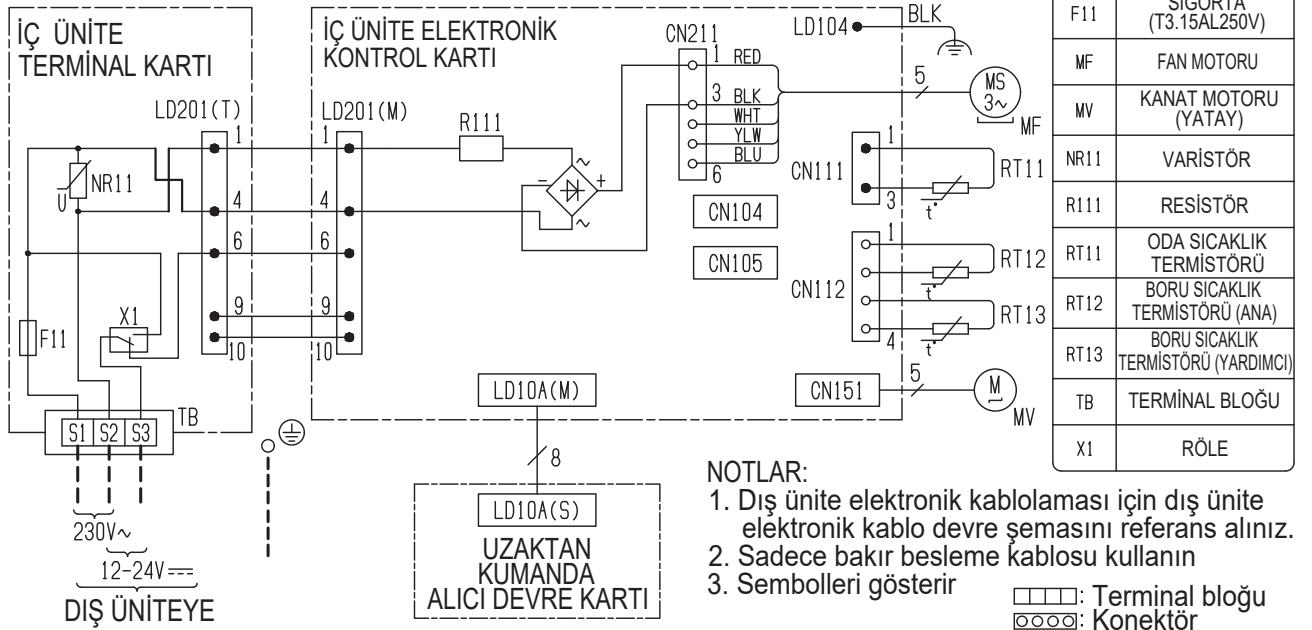MSZ-BT20VG- [ET2]**MSZ-BT25VG- [ET2]****MSZ-BT35VG- [ET2]****MSZ-BT50VG- [ET2]****MSZ-BT20VG- [ET3]****MSZ-BT25VG- [ET3]****MSZ-BT35VG- [ET3]****MSZ-BT50VG- [ET3]**


MSZ-BT20VGK- [E1], [ER1] MSZ-BT25VGK- [E1], [ER1] MSZ-BT35VGK- [E1], [ER1] MSZ-BT50VGK- [E1], [ER1]

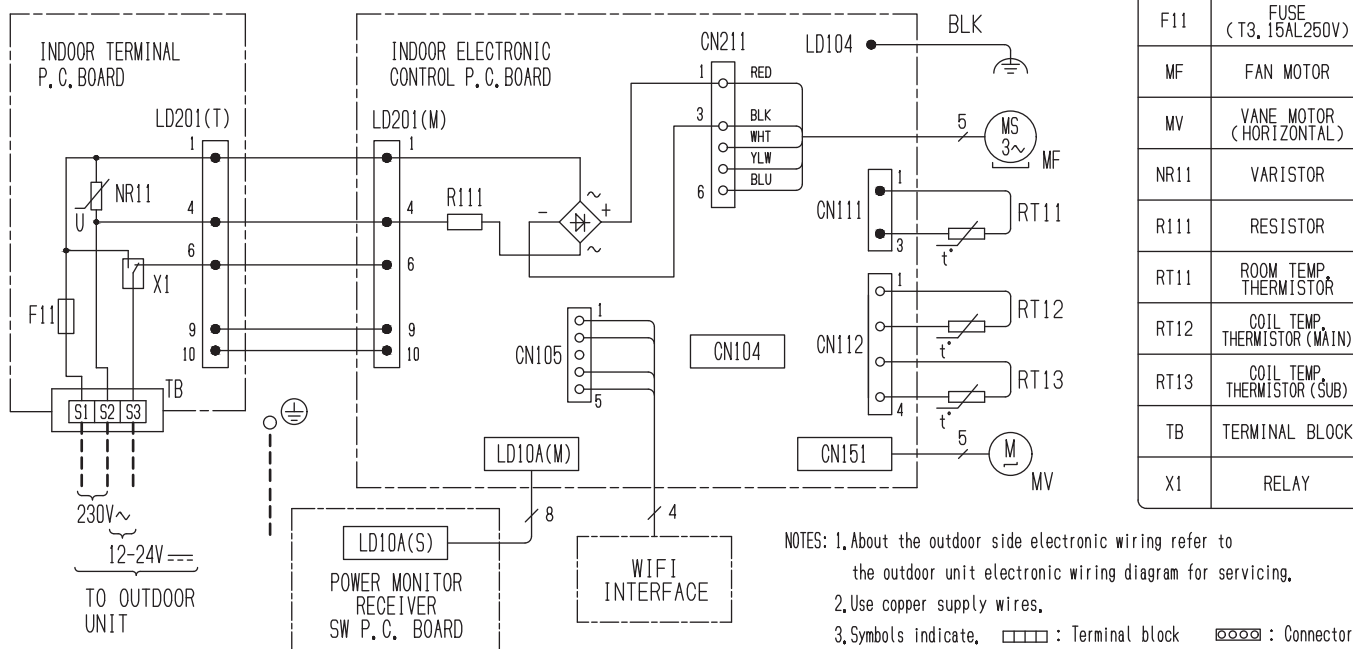

MSZ-BT20VGK- [E2] MSZ-BT25VGK- [E2] MSZ-BT35VGK- [E2] MSZ-BT50VGK- [E2]

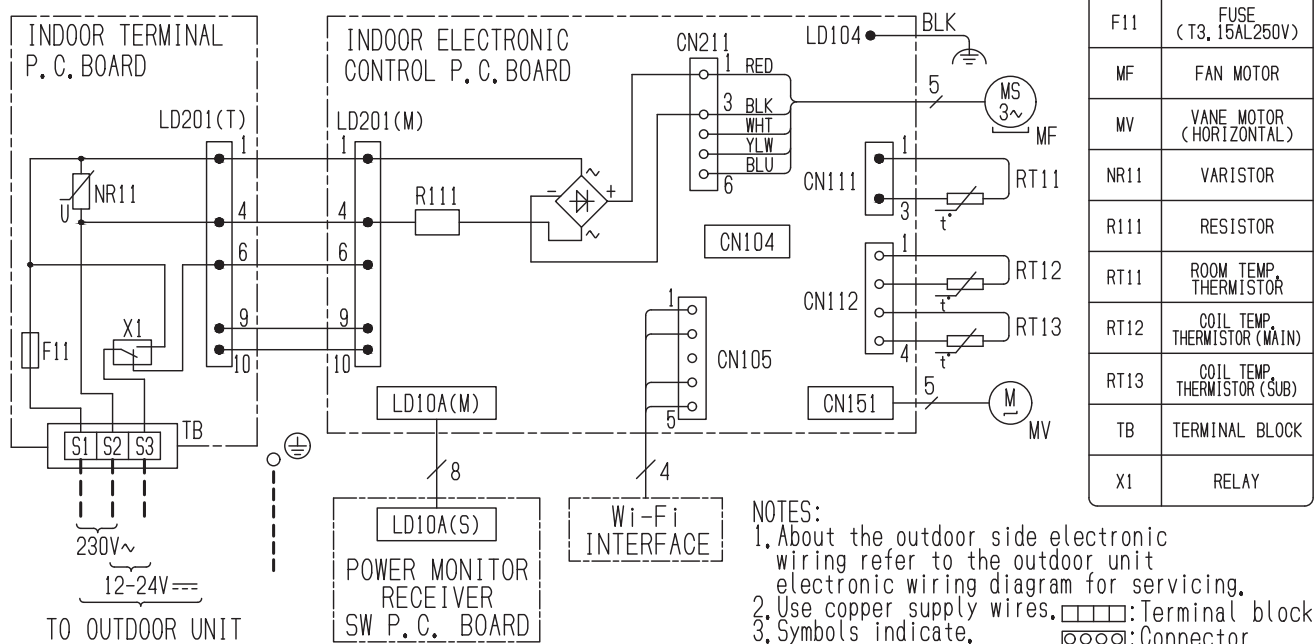


MSZ-BT20VGK- [E3], [ER2] MSZ-BT25VGK- [E3], [ER2] MSZ-BT35VGK- [E3], [ER2] MSZ-BT50VGK- [E3], [ER2]

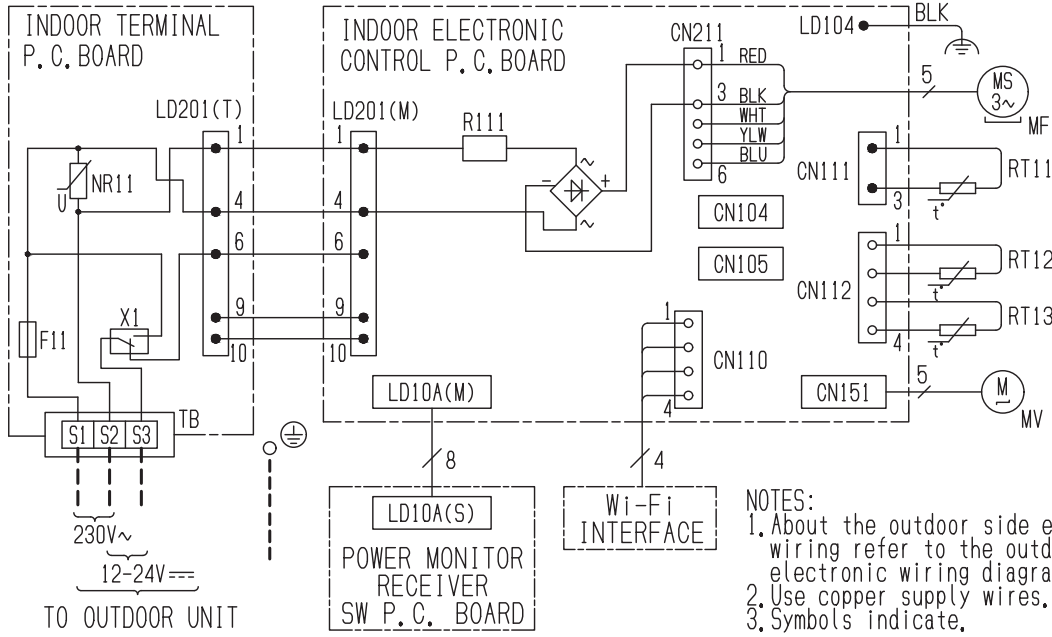

SYMBOL	NAME
F11	FUSE (T3, 15A/250V)
MF	FAN MOTOR
MV	VANE MOTOR (HORIZONTAL)
NR11	VARISTOR
R111	RESISTOR
RT11	ROOM TEMP THERMISTOR
RT12	COIL TEMP THERMISTOR (MAIN)
RT13	COIL TEMP THERMISTOR (SUB)
TB	TERMINAL BLOCK
X1	RELAY

- NOTES:
- About the outdoor side electronic wiring refer to the outdoor unit electronic wiring diagram for servicing.
 - Use copper supply wires. : Terminal block
 - Symbols indicate. : Connector


MSZ-BT20VGK- [ET1] MSZ-BT25VGK- [ET1] MSZ-BT35VGK- [ET1] MSZ-BT50VGK- [ET1]

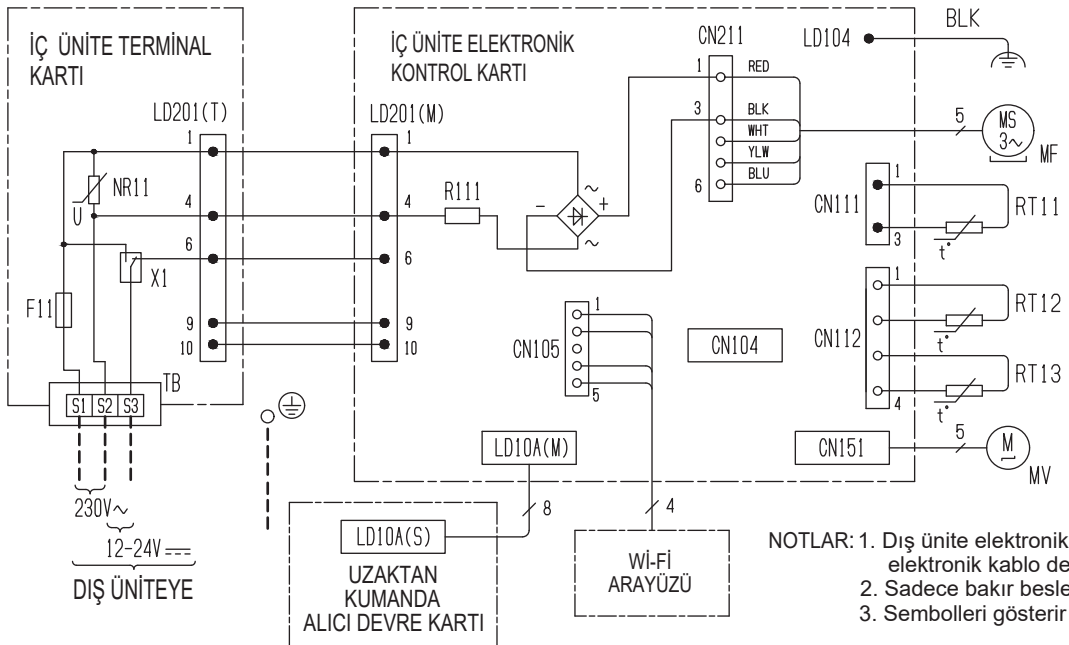


SEMBOL	PARÇA ADI
F11	SİĞORTA (T3, 15A/250V)
MF	FAN MOTORU
MV	KANAT MOTORU (YATAY)
NR11	VARİSTÖR
R111	RESİSTÖR
RT11	ODA SICAKLIK TERMİSTÖRÜ
RT12	BORU SICAKLIK TERMİSTÖRÜ (ANA)
RT13	BORU SICAKLIK TERMİSTÖRÜ (YARDIMCI)
TB	TERMINAL BLOĞU
X1	RÖLE

- NOTLAR:
- Dış ünite elektronik kabloları için dış ünite elektronik kablo devre şemasını referans alın.
 - Sadece bakır besleme kablosu kullanın
 - Semboller gösterir : Terminal bloğu : Konektör

MSZ-BT20VGK- [ET2] MSZ-BT25VGK- [ET2] MSZ-BT35VGK- [ET2] MSZ-BT50VGK- [ET2]

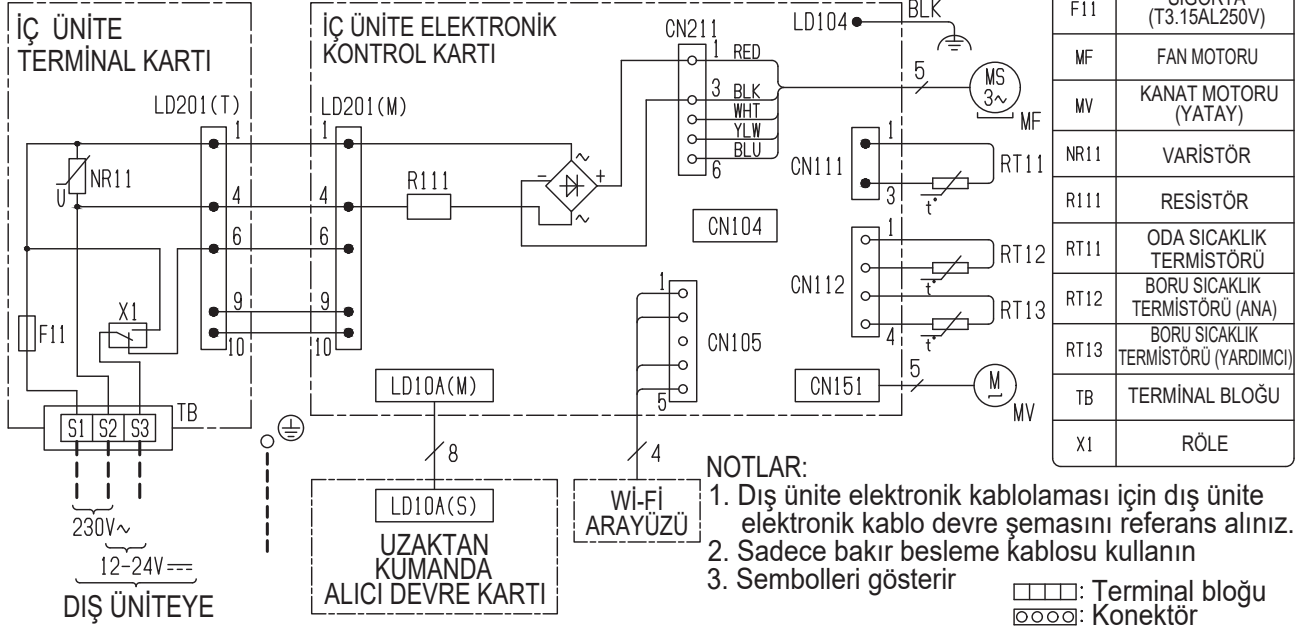


MSZ-BT20VGK- [ET3] MSZ-BT25VGK- [ET3] MSZ-BT35VGK- [ET3] MSZ-BT50VGK- [ET3]

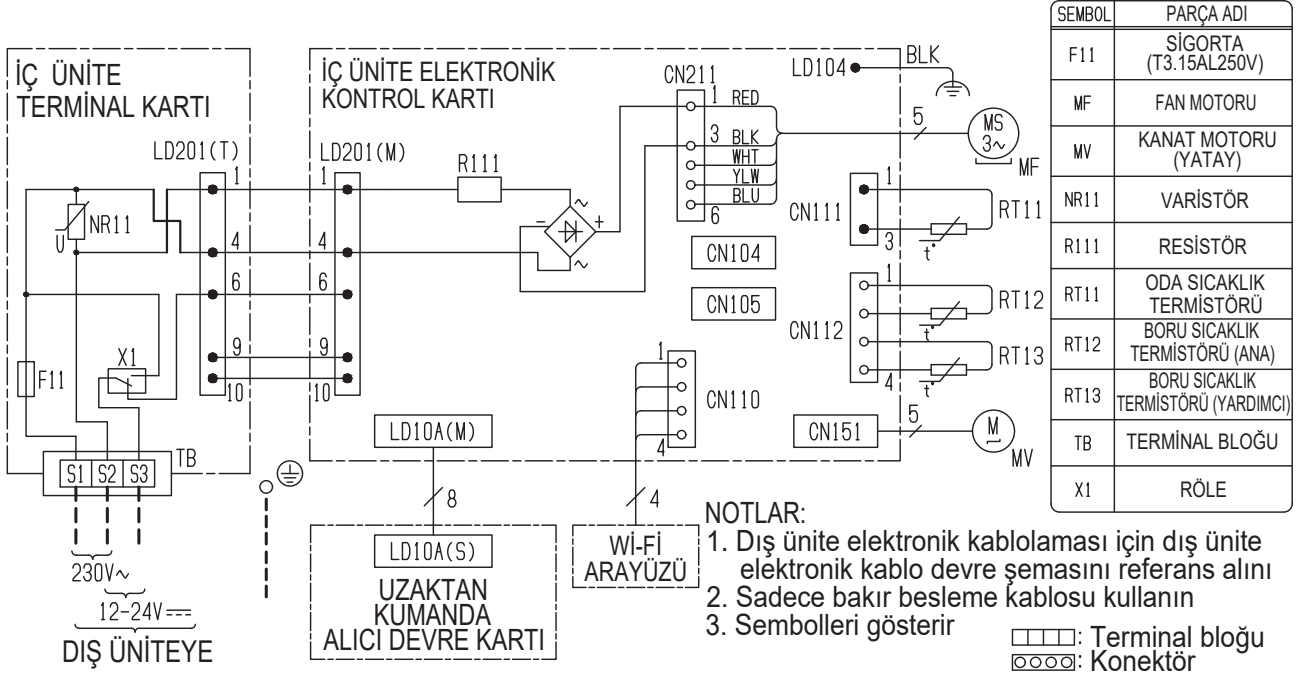


MSZ-BT20VG MSZ-BT25VG
MSZ-BT20VGK MSZ-BT25VGK

Unit: mm

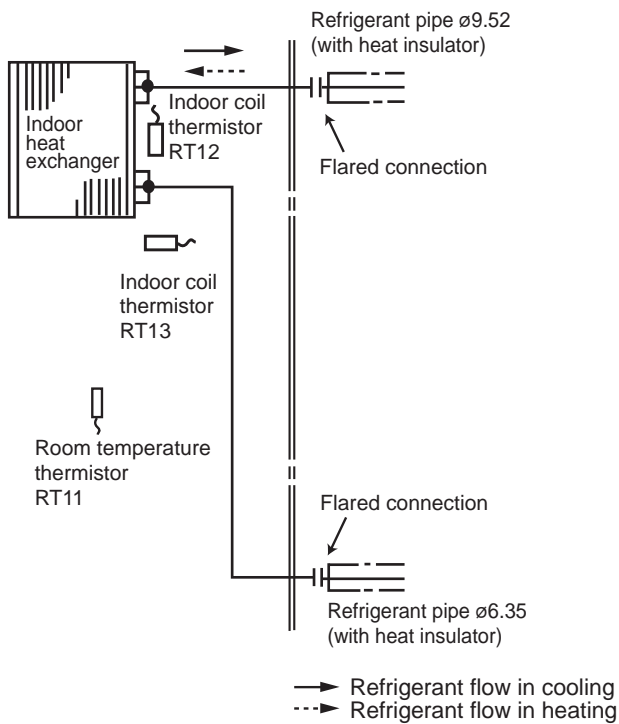

MSZ-BT35VG MSZ-BT50VG
MSZ-BT35VGK MSZ-BT50VGK

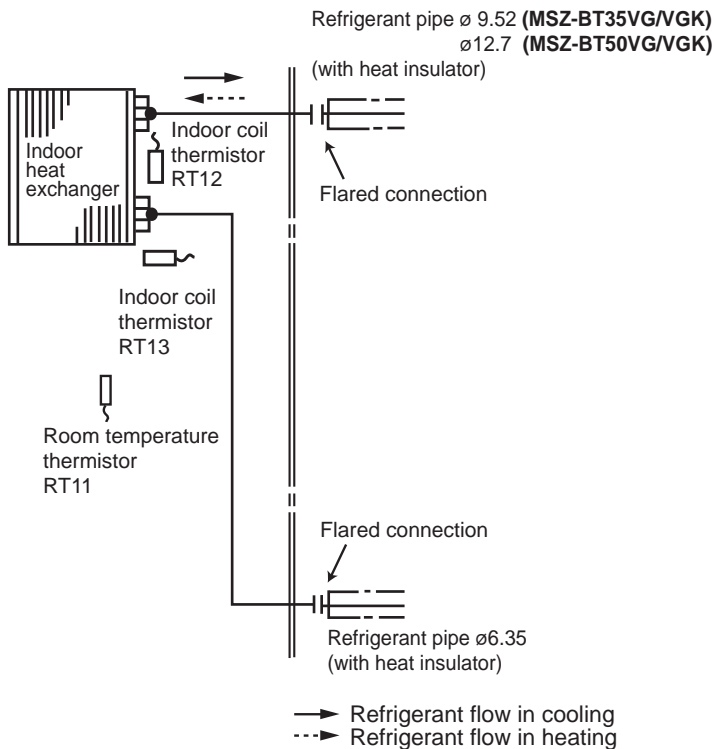

MSZ-BT20VG MSZ-BT25VG MSZ-BT35VG MSZ-BT50VG MSZ-BT20VGK MSZ-BT25VGK MSZ-BT35VGK MSZ-BT50VGK

8-1. TIMER SHORT MODE

For service, the following set time can be shortened by bridging the timer short mode point on the electronic control P.C. board. (Refer to 10-7.)


- The set time for the ON/OFF timer can be reduced to 1 second for each minute.
- After the breaker is turned on, the time for starting the compressor, which normally takes 3 minutes, can be reduced to 1 minute. Restarting the compressor, which takes 3 minutes, cannot be reduced.


8-2. HOW TO SET REMOTE CONTROLLER EXCLUSIVELY FOR A PARTICULAR INDOOR UNIT

A maximum of 4 indoor units with wireless remote controllers can be set.

To operate the indoor unit individually with each remote controller, assign a number to each remote controller according to the number of the indoor unit.

Set according to the following procedure:

- (1) Turn the breaker OFF for the unit.
- (2) With the remote controller powered OFF, hold down UNIT button on the remote controller for 2 seconds to enter the pairing mode.
Setting number is displayed in the remote controller.
- (3) Press UNIT button again and assign a number to each remote controller.
Each press of UNIT button advances the number in the following order: 1→2→3→4.
- (4) Press to OPERATION SELECT() button complete the pairing setting.

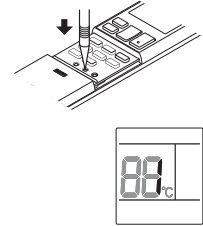

After you turn the breaker ON, the remote controller that first sends a signal to an indoor unit will be regarded as the remote controller for the indoor unit.

Once they are set, the indoor unit will only receive the signal from the assigned remote controller afterwards.

The setting of indoor unit will be cancelled, if the breaker is turned OFF or the power supply is shut down.

8-3. AUTO RESTART FUNCTION


When the indoor unit is controlled with the remote controller, the operation mode, the set temperature, and the fan speed are memorized by the indoor electronic control P.C. board. "AUTO RESTART FUNCTION" automatically starts operation in the same mode just before the shutoff of the main power.

Operation

- ① If the main power has been cut, the operation settings remain.
- ② After the power is restored, the unit restarts automatically according to the memory.
(However, it takes at least 3 minutes for the compressor to start running.)

How to disable "AUTO RESTART FUNCTION"

- ① Turn off the main power for the unit.
- ② Cut the jumper wire to JR77 on the indoor electronic control P.C. board. (Refer to 10-7.)

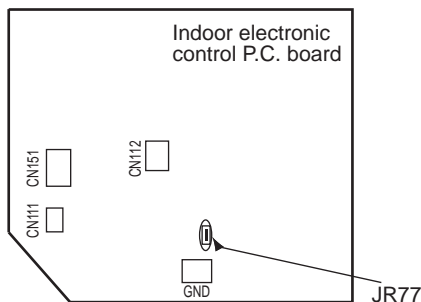


NOTE:

- The operation settings are memorized when 10 seconds have passed after the indoor unit was operated with the remote controller.
- If main power is turned OFF or a power failure occurs while AUTO START/STOP timer is active, the timer setting is cancelled.
- If the unit has been turned OFF with the remote controller before power failure, the auto restart function does not work as the power button of the remote controller is OFF.
- To prevent the breaker from tripping OFF due to the rush of starting current, systematize other home appliance not to turn ON at the same time.
- When some air conditioners are connected to the same supply system, if they are operated before power failure, the starting current of all the compressors may flow simultaneously at restart.
Therefore, the special counter-measures are required to prevent the main voltage-drop or the rush of the starting current by adding to the system that allows the units to start one by one.


8-4. Wi-Fi INTERFACE SETTING UP (MSZ-BT-VGK)

This Wi-Fi interface communicates the status information and controls the commands from the MELCloud by connecting to an indoor unit.

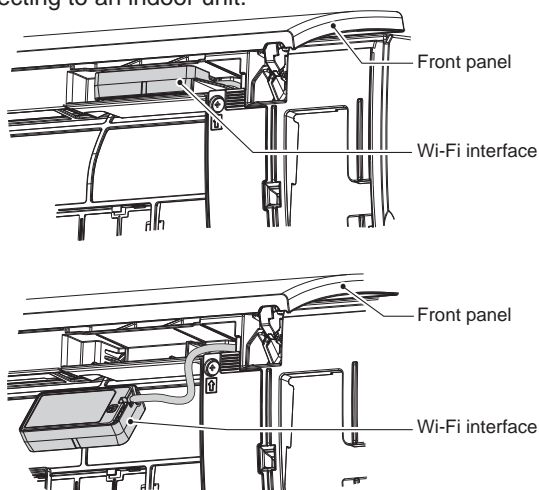

Wi-Fi interface introduction

No.	Item	Description
1	MODE switch	It selects modes.
2	RESET switch	It resets the system and ALL settings.
3	ERR LED (Orange)	It shows the network error state.
4	NET LED (Green)	It shows the network state.
5	MODE LED (Orange)	It shows the Access point mode state.
6	UNIT LED (Green)	It shows the indoor unit state.

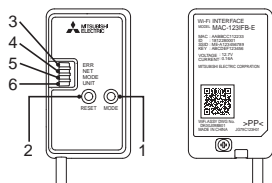

- (1) MODE switch
 - The MODE switch is used for selecting modes in configurations.
- (2) RESET switch
 - Hold down the RESET switch for 2 seconds to reboot the system.
 - Hold down the RESET switch for 14 seconds to initialize the Wi-Fi interface to the factory default.

NOTE:

When the Wi-Fi interface is reset to the factory default, ALL the configuration information will be lost. Take great care in implementing this operation.

- (1) Open the front panel and remove the Wi-Fi interface.
- (2) Set up a connection between the Wi-Fi interface and the router.
Refer to the SETUP MANUAL and SETUP QUICK REFERENCE GUIDE provided with the unit.
For SETUP MANUAL, please go to the website below.
<http://www.mitsubishielectric.com/ldg/ibim/>
- (3) Put the Wi-Fi interface back and close the front panel after the setup is completed.
- (4) For MELCloud User Manual, please go to the website below.
<https://www.melcloud.com/Support>

NOTE:


- Ensure that the Router supports the WPA2-AES encryption setting before starting the Wi-Fi interface setup.
- The End user should read and accept the terms and conditions of the Wi-Fi service before using this Wi-Fi interface.
- To complete connection of this Wi-Fi interface to the Wi-Fi service, the Router may be required.
- This Wi-Fi interface will not commence transmission of any operational data from the system until the End user registers and accepts the terms and conditions of the Wi-Fi service.
- This Wi-Fi interface should not be installed and connected to any Mitsubishi Electric system which is to provide application critical cooling or heating.
- At the time of relocation or disposal, reset the Wi-Fi interface to the factory default.

Mitsubishi Electric's Wi-Fi interface is designed for communication to Mitsubishi Electric's MELCloud Wi-Fi service. Third party Wi-Fi interfaces cannot be connected to MELCloud. Mitsubishi Electric is not responsible for any (i) under performance of a system or any product; (ii) system or product fault; or (iii) loss or damage to any system or product; which is caused by or arises from connection to and/or use of any third party Wi-Fi interface or any third party Wi-Fi service with Mitsubishi Electric equipment.

For the latest information regarding MELCloud from Mitsubishi Electric Corporation, please visit www.melcloud.com.

MSZ-BT20VG MSZ-BT25VG MSZ-BT35VG MSZ-BT50VG
MSZ-BT20VGK MSZ-BT25VGK MSZ-BT35VGK MSZ-BT50VGK

WIRELESS REMOTE CONTROLLER

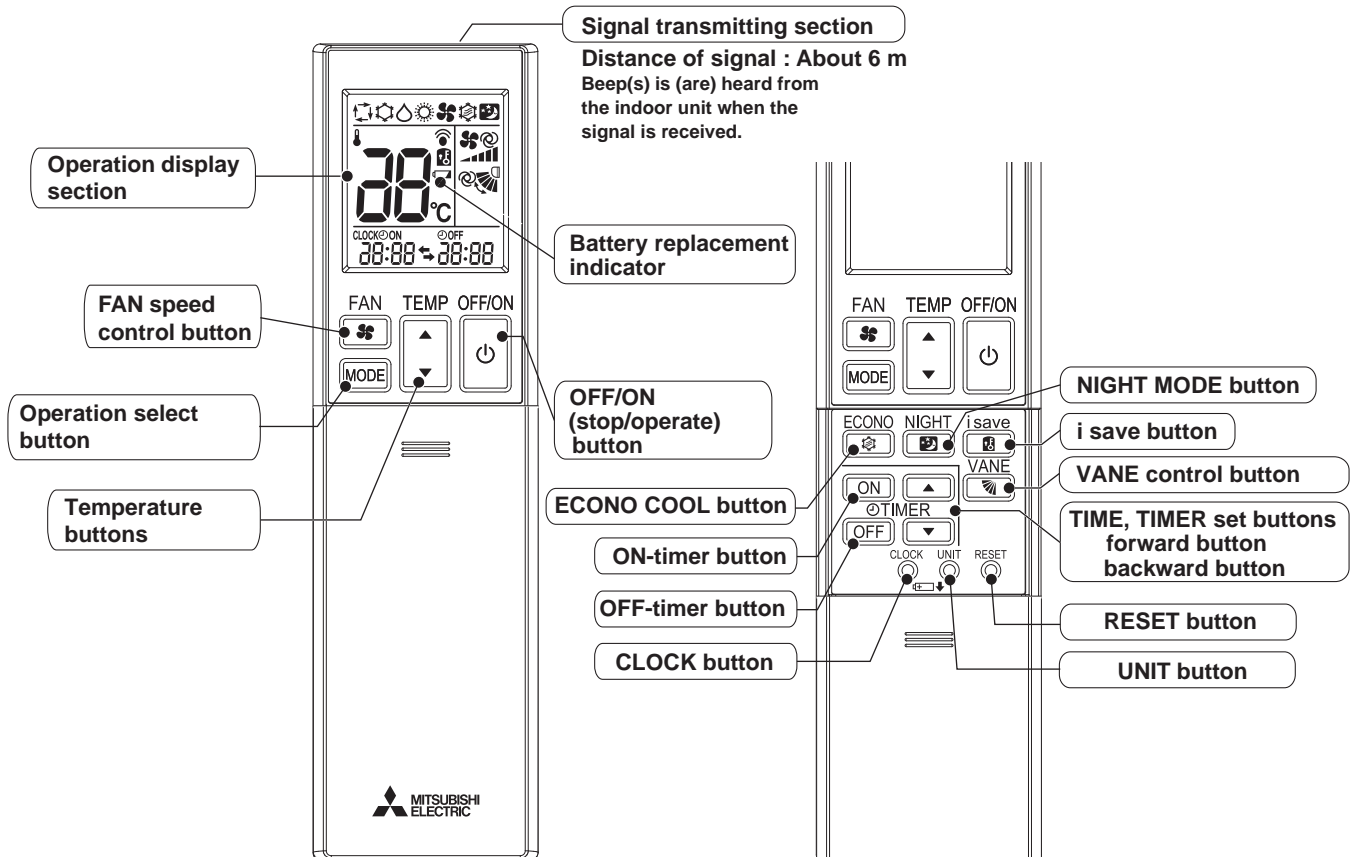

NOTE: Last setting will be stored after the unit is turned OFF with the remote controller. Indoor unit receives the signal of the remote controller with beeps.

INDOOR UNIT DISPLAY SECTION

Operation Indicator lamp

The operation indicator at the right side of the indoor unit indicates the operation state.

•The following indication applies regardless of shape of the indication.

Indication	Operation state	Room temperature
● ●	The unit is operating to reach the set temperature	About 2°C or more away from set temperature
● ○	The room temperature is approaching the set temperature	About 1 to 2°C from set temperature
● ☼	Standby mode (only during multi system operation)	—

● Lit
 ☼ Blinking
 ○ Not lit

9-1. COOL (❄️) OPERATION

- (1) Press OFF/ON (stop/operate) button.
OPERATION INDICATOR lamp of the indoor unit turns on with a beep tone.
- (2) Select COOL mode with Operation select button.
- (3) Press Temperature buttons (TOO WARM or TOO COOL button) to select the desired temperature. The setting range is 16 - 31°C.

1. Coil frost prevention

The compressor operational frequency is controlled by the temperature of the indoor heat exchanger to prevent the coil from frosting.

When the temperature of indoor heat exchanger becomes too low, the coil frost prevention mode works.

The indoor fan operates at the set speed and the compressor stops. This mode continues until the temperature of indoor heat exchanger rises.

2. Low outside temperature operation

When the outside temperature is lower, low outside temperature operation starts, and the outdoor fan slows or stops.

9-2. DRY (☀️) OPERATION

- (1) Press OFF/ON (stop/operate) button.
OPERATION INDICATOR lamp of the indoor unit turns on with a beep tone.
- (2) Select DRY mode with Operation select button.
- (3) The set temperature is determined from the initial room temperature.

1. Coil frost prevention

Coil frost prevention works the same way as that in COOL mode. (9-1.1.)

2. Low outside temperature operation

Low outside temperature operation works the same way as that in COOL mode. (9-1.2.)

9-3. FAN (🌀) OPERATION

- (1) Press OFF/ON (stop/operate) button.
OPERATION INDICATOR lamp of the indoor unit turns ON with a beep tone.
- (2) Select FAN mode with Operation select button.
- (3) Select the desired fan speed. When AUTO, it becomes Low.
Only indoor fan operates. Outdoor unit does not operate.

9-4. HEAT (🔥) OPERATION

- (1) Press OFF/ON (stop/operate) button.
OPERATION INDICATOR lamp of the indoor unit turns on with a beep tone.
- (2) Select HEAT mode with Operation select button.
- (3) Press Temperature buttons (TOO WARM or TOO COOL button) to select the desired temperature.
The setting range is 10 ~ 31°C.

1. Cold air prevention control

When the compressor is not operating or is starting, and the temperature of indoor heat exchanger and/or the room temperature is low or when defrosting is being done, the indoor fan will stop or rotate in Very Low speed.

2. High pressure protection

The compressor operational frequency is controlled by the temperature of the indoor heat exchanger to prevent the condensing pressure from increasing excessively.

When the temperature of indoor heat exchanger becomes too high, the high pressure protection works.

The indoor fan operates following the cold air prevention control. This mode continues until the temperature of indoor heat exchanger falls.

3. Defrosting

Defrosting starts when the temperature of outdoor heat exchanger becomes too low.

The compressor stops once, the indoor/outdoor fans stop, the 4-way valve reverses, and the compressor re-starts.

This mode continues until the temperature of outdoor heat exchanger rises or the fixed time passes.

9-5. MULTI SYSTEM OPERATION FOR MULTI SYSTEM AIR CONDITIONER OUTDOOR UNIT: MXZ series

Multi system air conditioner can connect 2 or more indoor units with 1 outdoor unit.

- When you try to operate 2 or more indoor units with 1 outdoor unit simultaneously, one for the cooling and the others for heating, the operation mode of the indoor unit that operates first is selected. Other indoor units cannot operate, and operation indicator lamp blinks as shown in the figure below. In this case, please set all the indoor units to the same operation mode.

OPERATION INDICATOR



- When indoor unit starts the operation while the defrosting of outdoor unit is being done, it takes a few minutes (max. 10 minutes) to blow out the warm air.
- In the heating operation, though indoor unit is not operating, it may get warm or the sound of refrigerant flow may be heard. It is not malfunction. The reason is that the refrigerant continuously flows into it.


9-6. AUTO VANE OPERATION

1. Horizontal vane

(1) Vane motor drive

These models are equipped with a stepping motor for the horizontal vane. The rotating direction, speed, and angle of the motor are controlled by pulse signals (approximately 12 V) transmitted from indoor microprocessor.

(2) The horizontal vane angle and mode change as follows by pressing VANE control button.



(3) Positioning

To confirm the standard position, the vane moves until it touches the vane stopper. Then the vane is set to the selected angle.

Confirmation of standard position is performed in the following cases:

- When the operation starts or finishes (including timer operation).
- When the test run starts.
- When standby mode (only during multi system operation) starts or finishes.

(4) VANE AUTO (@) mode

In VANE AUTO mode, the microprocessor automatically determines the vane angle to make the optimum room temperature distribution.

In COOL and DRY operation

Vane angle is fixed to Horizontal position.

In HEAT operation

Vane angle is fixed to Angle 5.



(5) STOP (operation OFF) and ON TIMER standby

In the following cases, the horizontal vane returns to the closed position.

- When OFF/ON (stop/operate) button is pressed (POWER OFF).
- When the operation is stopped by the emergency operation.
- When ON TIMER is ON standby.

(6) Dew prevention

During COOL or DRY operation with the vane angle at Angle 3 to 5 when the compressor cumulative operation time exceeds 1 hour, the vane angle automatically changes to Angle 2 for dew prevention.

(7) SWING () mode

By selecting SWING mode with VANE control button, the horizontal vane swings vertically.

(8) ECONO COOL () operation (ECONOMical operation)

When ECONO COOL button is pressed in COOL mode, set temperature and the air flow direction is automatically changed by the microprocessor. However, the temperature on the LCD screen on the remote controller is not changed. Also the horizontal vane swings in various cycle.

SWING operation makes you feel cooler than set temperature. So, even though the set temperature is higher, the air conditioner can keep comfort. As a result, energy can be saved.

To cancel this operation, select a different mode or press one of the following buttons in ECONO COOL operation: ECONO COOL, VANE control button.

9-7. TIMER OPERATION (ON/OFF TIMER)

1. How to set the timer

- (1) Press **ON** or **OFF** during operation to set the timer.
- (2) **ON** (ON timer) : The unit turns ON at the set time.
OFF (OFF timer) : The unit turns OFF at the set time.
- (3) Press **▲** (forward) and **▼** (backward) to set the time of timer.

9-8. EMERGENCY/TEST OPERATION

In the case of test run operation or the emergency operation, use the the emergency operation switch in the right side of the indoor unit. The emergency operation is available when the remote controller is missing or has failed, or when the batteries in the remote controller are running down. The unit will start and OPERATION INDICATOR lamp will light up.

The first 30 minutes of operation is the test run operation. This operation is for servicing. The indoor fan runs at High speed and the temperature control does not work.


After 30 minutes of test run operation, the system shifts to EMERGENCY COOL/HEAT MODE with a set temperature of 24°C. The fan speed shifts to Medium. The coil frost prevention works even in the test run or the the emergency operation.

In the test run or the emergency operation, the horizontal vane operates in VANE AUTO (@) mode.

The emergency operation continues until the the emergency operation switch is pressed once or twice or the unit receives any signal from the remote controller. In the latter case, normal operation will start.


NOTE: Do not press the the emergency operation switch during normal operation.



The emergency operation switch —  E.O.S.W

Operation mode	COOL/HEAT
Set temperature	24°C
Fan speed	Medium
Horizontal vane	Auto

The operation mode is indicated by the Operation Indicator lamp as following Operation Indicator lamp

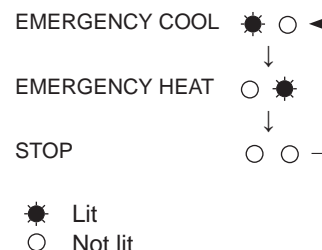

9-9. 3-MINUTE TIME DELAY OPERATION

When the system turns OFF, compressor will not restart for 3 minutes as 3-minute time delay function operates to protect compressor from overload.

MSZ-BT20VG MSZ-BT25VG MSZ-BT35VG MSZ-BT50VG
MSZ-BT20VGK MSZ-BT25VGK MSZ-BT35VGK MSZ-BT50VGK

10-1. CAUTIONS ON TROUBLESHOOTING


1. Before troubleshooting, check the following

- 1) Check the power supply voltage.
- 2) Check the indoor/outdoor connecting wire for miswiring.

2. Take care of the following during servicing


- 1) Before servicing the air conditioner, be sure to turn OFF the main unit first with the remote controller, and after confirming the horizontal vane is closed, turn OFF the breaker and/or disconnect the power plug.
- 2) Before servicing, verify that all connectors and terminals are connected properly.
- 3) When the electronic control P.C. board seems to be defective, check for disconnection of the copper foil pattern and burnt or discolored components.
- 4) When connecting or disconnecting the connectors, hold the connector housing. DO NOT pull the lead wires.

<Incorrect>



Lead wiring

<Correct>



Connector housing

3. Troubleshooting procedure


- 1) Check if the OPERATION INDICATOR lamp on the indoor unit is blinking ON and OFF to indicate an abnormality. To make sure, check how many times the OPERATION INDICATOR lamp is blinking ON and OFF before starting service work.
- 2) Before servicing, verify that all connectors and terminals are connected properly.
- 3) When the electronic control P.C. board seems to be defective, check for disconnection of the copper foil pattern and burnt or discolored components.
- 4) When troubleshooting, Refer to 10-2, 10-3 and 10-4.

4. How to replace batteries


Weak batteries may cause the remote controller malfunction.

In this case, replace the batteries to operate the remote controller normally.

- ① Remove the front lid and insert batteries. Then reattach the front lid.

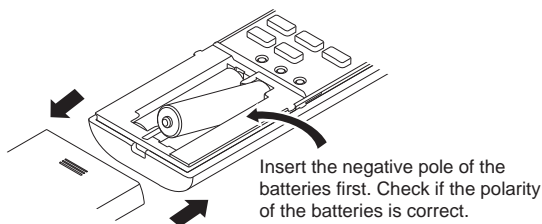

- ② Press RESET button with a fine-tipped object, and then use the remote controller.

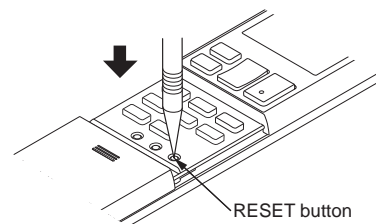

NOTE: 1. If RESET button is not pressed, the remote controller may not operate correctly.

2. This remote controller has a circuit to automatically reset the microprocessor when batteries are replaced.

This function is equipped to prevent the microprocessor from malfunctioning due to the voltage drop caused by the battery replacement.

3. Do not use the leaking batteries.

10-2. FAILURE MODE RECALL FUNCTION


Outline of the function

This air conditioner can memorize the abnormal condition which has occurred once.

Even though LED indication listed on the troubleshooting check table (10-4.) disappears, the memorized failure details can be recalled.


1. Flow chart of failure mode recall function for the indoor/outdoor unit

Operational procedure

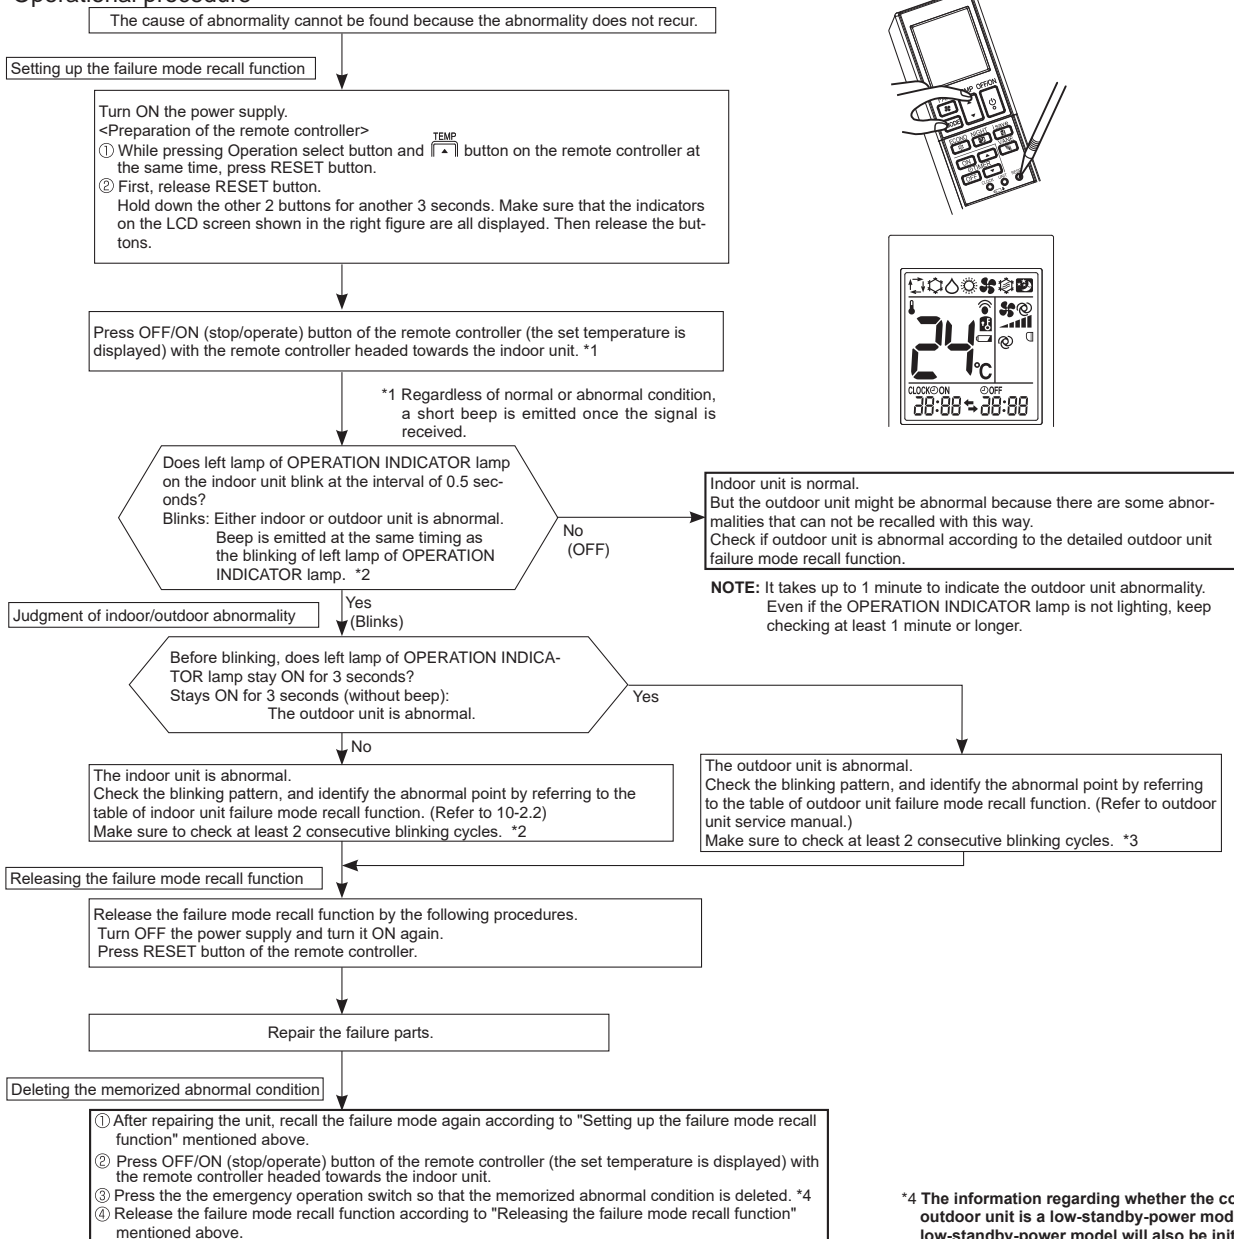


NOTE: 1. Make sure to release the failure mode recall function after it is set up, otherwise the unit cannot operate properly.
2. If the abnormal condition is not deleted from the memory, the last abnormal condition is kept memorized.

*2. Blinking pattern when the indoor unit is abnormal:

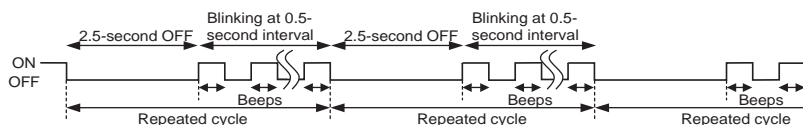

*3. Blinking pattern when the outdoor unit is abnormal:

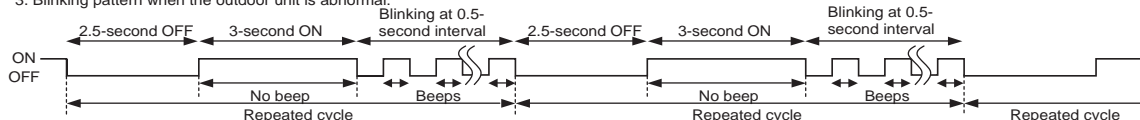



2. Table of indoor unit failure mode recall function

Left lamp of OPERATION INDICATOR lamp	Abnormal point (Failure mode)	Condition	Remedy
Not lit	Normal	—	—
1-time blink every 0.5-second	Room temperature thermistor	The room temperature thermistor short or open circuit is detected every 8 seconds during operation.	Refer to the characteristics of the room temperature thermistor (10-7.).
2-time blink 2.5-second OFF	Indoor coil thermistor	The indoor coil thermistor short or open circuit is detected every 8 seconds during operation.	Refer to the characteristics of the main indoor coil thermistor, the sub indoor coil thermistor (10-7.).
3-time blink 2.5-second OFF	Serial signal	The serial signal from outdoor unit is not received for a maximum of 6 minutes.	Refer to 10-6.㉔ "How to check miswiring and serial signal error".
11-time blink 2.5-second OFF	Indoor fan motor	The rotational frequency feedback signal is not emitted for the 12 seconds after the indoor fan is operated.	Refer to 10-6.㉕ "Check of indoor fan motor".
12-time blink 2.5-second OFF	Indoor control system	It cannot properly read data in the nonvolatile memory of the indoor electronic control P.C. board.	Replace the indoor electronic control P.C. board.

NOTE: Blinking patterns of this mode differ from the ones of TROUBLESHOOTING CHECK TABLE (10-4.).


10-3. INSTRUCTION OF TROUBLESHOOTING

1. Check of the unit.

*1. "Test Run operation" means the operation within 30 minutes after The emergency operation switch is pressed.


If blinking of OPERATION INDICATOR lamp cannot be checked, it can be checked with failure mode recall function.

*2 There is possibility that diesel explosion may occur due to the air mixed in the refrigerant circuit.
First, ensure that there are no leakage points on the valves, flare connections, etc. that allow the air to flow into the refrigerant circuit, or no blockage points (e.g. clogged or closed valves) in the refrigerant circuit that cause an increase in pressure.
If there is no abnormal point like above and the system operates cooling and heating modes normally, the indoor thermistor might have a problem, resulting in false detection.
Check both the indoor coil thermistor and the room temperature thermistor, and replace faulty thermistor(s), if any.
(Do not start the operation again without repair to prevent hazards.)

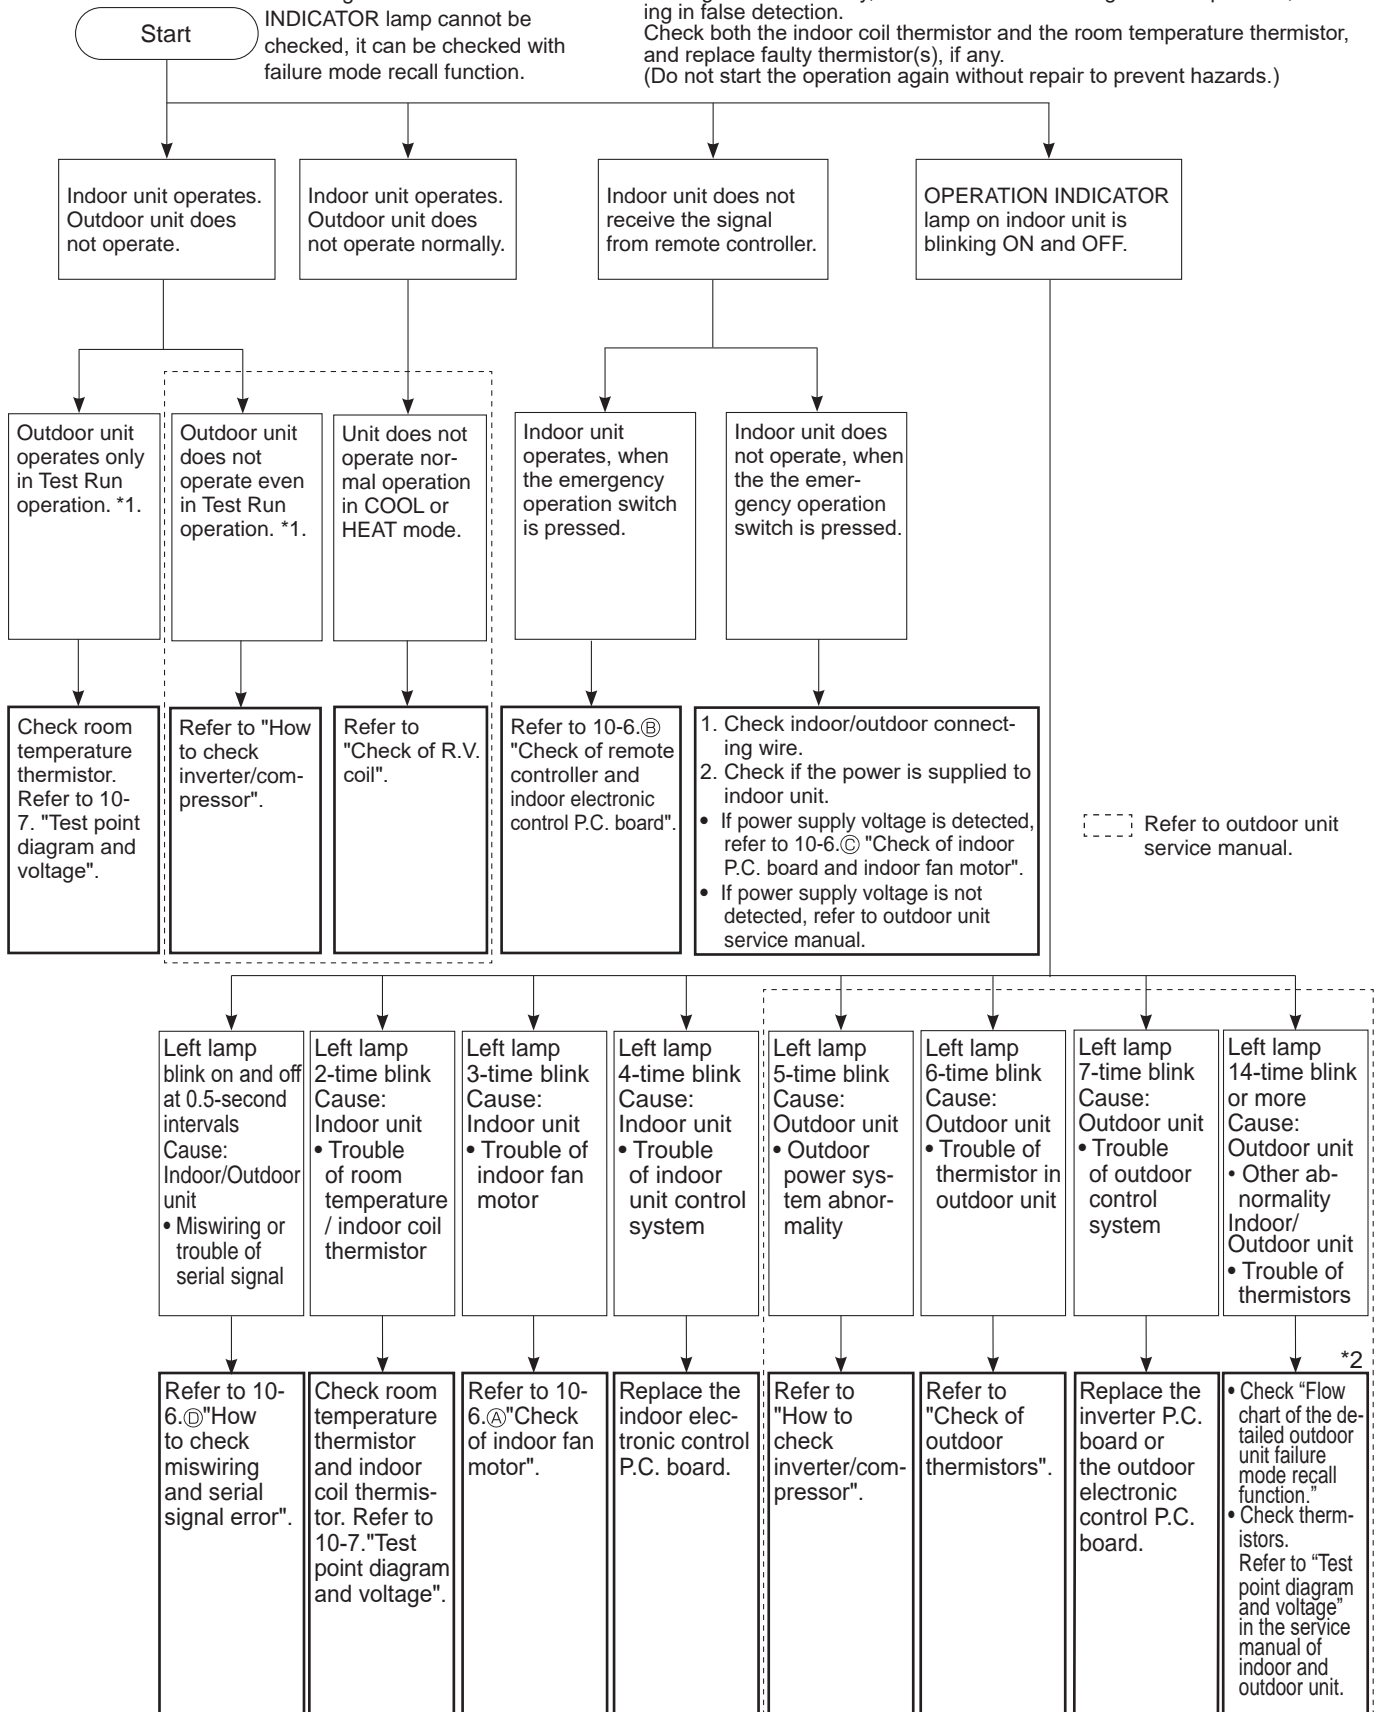

2. Check of Wi-Fi interface (MSZ-BT-VGK)

Follow the procedure below if the air conditioner cannot be monitored or controlled with a device such as a smartphone.

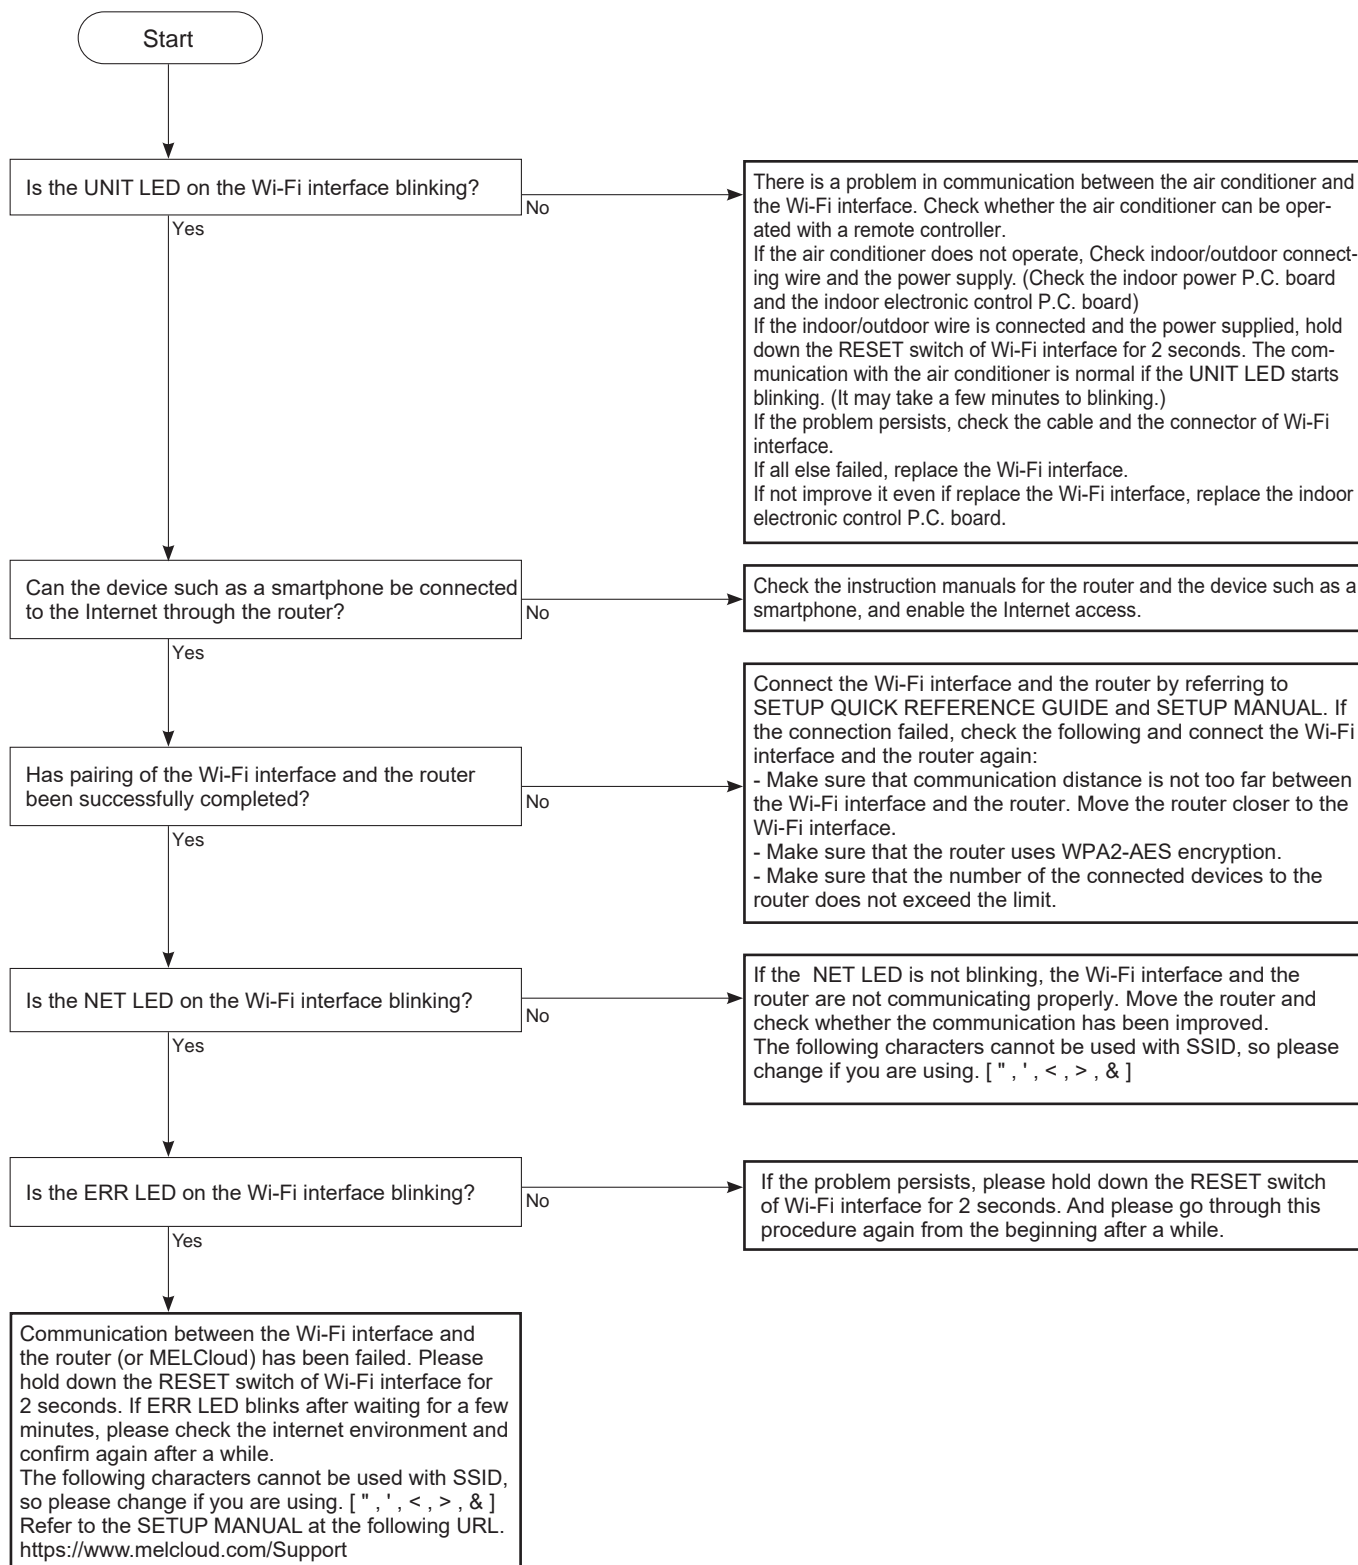


10-4. TROUBLESHOOTING CHECK TABLE

Before taking measures, make sure that the symptom reappears for accurate troubleshooting.

When the indoor unit has started operation and detected an abnormality of the following condition (the first detection after the power ON), the indoor fan motor turns OFF and OPERATION INDICATOR lamp blinks.

OPERATION INDICATOR



No.	Abnormal point	Operation indicator lamp	Symptom	Condition	Remedy
1	Miswiring or serial signal	Left lamp blinks. 0.5-second ON 0.5-second OFF	Indoor unit and outdoor unit do not operate.	The serial signal from the outdoor unit is not received for 6 minutes. The indoor unit is connected to a low-standby-power model after once connected to a non-low-standby-power model.	<ul style="list-style-type: none"> Refer to 10-6. ② "How to check miswiring and serial signal error". Refer to NOTE.
2	Indoor coil thermistor Room temperature thermistor	Left lamp blinks. 2-time blink 2.5-second OFF		The indoor coil or the room temperature thermistor is short or open circuit.	<ul style="list-style-type: none"> Refer to the characteristics of indoor coil thermistor, and the room temperature thermistor (10-7.).
3	Indoor fan motor	Left lamp blinks. 3-time blink 2.5-second OFF		The rotational frequency feedback signal is not emitted during the indoor fan operation.	<ul style="list-style-type: none"> Refer to 10-6. ④ "Check of indoor fan motor".
4	Indoor control system	Left lamp blinks. 4-time blink 2.5-second OFF		It cannot properly read data in the nonvolatile memory of the indoor electronic control P.C. board.	<ul style="list-style-type: none"> Replace the indoor electronic control P.C. board.
5	Outdoor power system	Left lamp blinks. 5-time blink 2.5-second OFF		It consecutively occurs 3 times that the compressor stops for overcurrent protection or start-up failure protection within 1 minute after start-up.	<ul style="list-style-type: none"> Refer to "How to check of inverter/compressor". Refer to outdoor unit service manual. Check the stop valve.
6	Outdoor thermistors	Left lamp blinks. 6-time blink 2.5-second OFF		The outdoor thermistors short or open circuit during the compressor operation.	<ul style="list-style-type: none"> Refer to "Check of outdoor thermistor". Refer to outdoor unit service manual.
7	Outdoor control system	Left lamp blinks. 7-time blink 2.5-second OFF		It cannot properly read data in the nonvolatile memory of the inverter P.C. board or the outdoor electronic control P.C. board.	<ul style="list-style-type: none"> Replace the inverter P.C. board or the outdoor electronic control P.C. board. Refer to outdoor unit service manual.
8	Other abnormality *2 on 10-3	Left lamp blinks. 14-time blink or more 2.5-second OFF		An abnormality other than above mentioned is detected. An abnormality of the indoor thermistors, the defrost thermistor or ambient temperature thermistor is detected.	<ul style="list-style-type: none"> Check the stop valve. Check the 4-way valve. Confirm the abnormality in detail using the failure mode recall function for outdoor unit. Refer to TEST POINT DIAGRAM AND VOLTAGE" on the service manual of indoor and outdoor unit for the characteristics of the thermistors. (Do not start the operation again without repair to prevent hazards.)
9	Outdoor control system	Upper lamp lights up. 	Outdoor unit does not operate	It cannot properly read data in the nonvolatile memory of the inverter P.C. board.	<ul style="list-style-type: none"> Check the blinking pattern of the LED on the inverter P.C. board.

NOTE:

The indoor unit may have been connected to a non-low-standby-power model outdoor unit. To use a low-standby-power-model, clear the error history by referring to "Deleting the memorized abnormal condition" described in 10-2.1. When the error history is being cleared, the connection information also will be initialized. The indoor unit will be compatible with a low-standby-power model after initialization. If the operation indicator lamp continues to blink as shown in No.1 after the procedure, refer to 10-6. ② "How to check miswiring and serial error".


OPERATION INDICATOR



- Lit
- ◐ Blinking
- Not lit

No.	Abnormal point	Operation indicator lamp	Symptom	Condition	Remedy
1	MXZ type Operation mode setting	Left lamp lights and right lamp blinks. 2.5-second OFF	Outdoor unit operates but indoor unit does not operate.	The operation mode of the each indoor unit is differently set to COOL (includes DRY, FAN) and HEAT at the same time, the operation mode of the indoor unit that has operated at first has the priority.	<ul style="list-style-type: none"> Unify the operation mode. Refer to outdoor unit service manual.

10-5. TROUBLE CRITERION OF MAIN PARTS

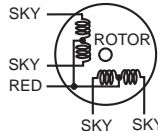
Part name	Check method and criterion	Figure				
Room temperature thermistor (RT11) Indoor coil thermistor (RT12, RT13)	Measure the resistance with a multimeter. Refer to 10-7. "Test point diagram and voltage", "Indoor electronic control P.C. board", for the chart of thermistor.					
Indoor fan motor (MF)	Check 10-6.㉔ "Check of indoor fan motor".					
Vane motor (MV)	<div>Measure the resistance between the terminals with a multimeter. (Temperature: 10 - 30°C)</div> <table><tr><td>Color of the lead wire</td><td>Normal</td></tr><tr><td>RED-SKY</td><td>262 ~ 328 Ω</td></tr></table>	Color of the lead wire	Normal	RED-SKY	262 ~ 328 Ω	
Color of the lead wire	Normal					
RED-SKY	262 ~ 328 Ω					

*SKY=SKY BLUE


10-6. TROUBLESHOOTING FLOW

A Check of indoor fan motor

The indoor fan motor error has occurred, and the indoor fan does not operate.

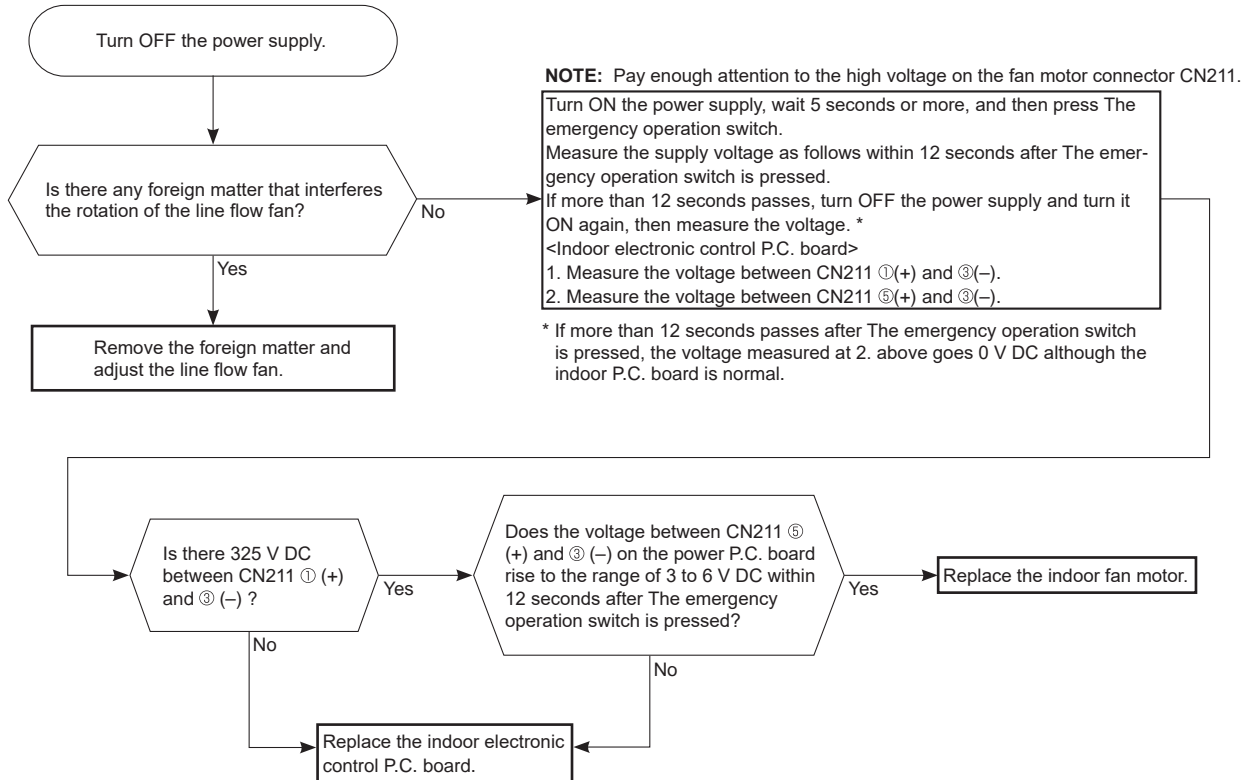


The indoor fan motor error has occurred, and the indoor fan repeats "12-second ON and 30-second OFF" 3 times, and then stops.

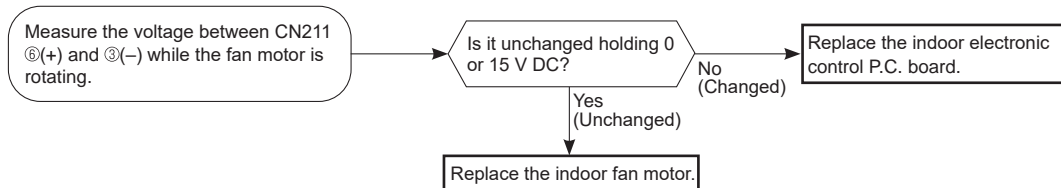

B Check of remote controller and indoor electronic control P.C. board


*Check if the remote controller is exclusive for this air conditioner.

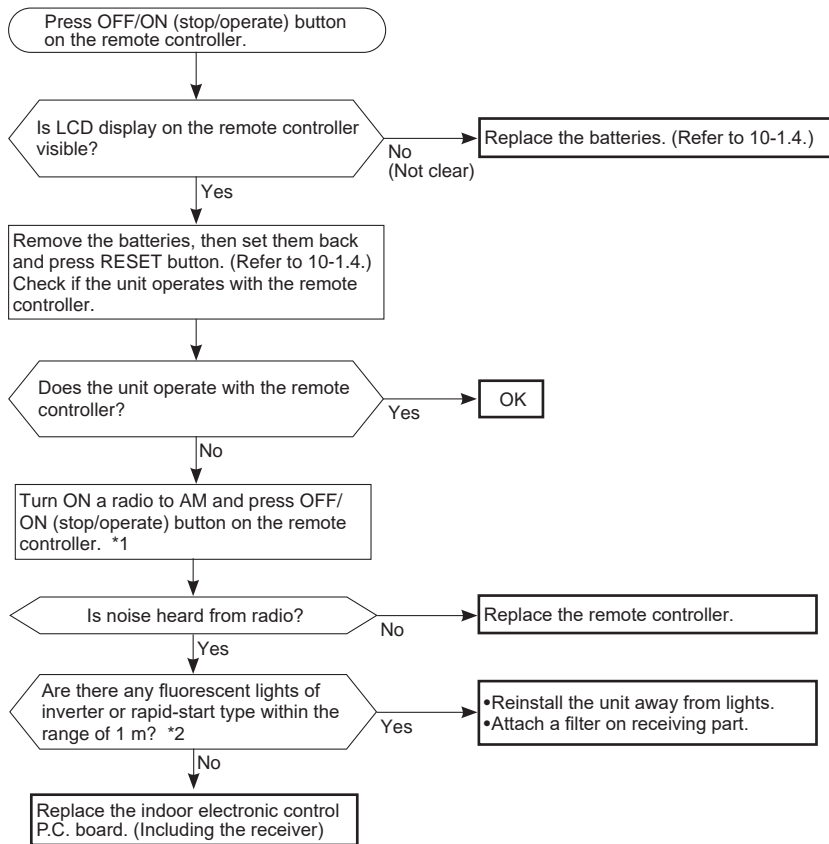


*1 Look at the image of the signal transmitting section of the remote controller through the monitor of a digital camera or a camera phone. It is normal if the LED of the signal transmitting section lights up when the OPERATE/STOP (ON/OFF) button on the remote controller is pressed. However, it may be difficult to see the illuminated LED of the signal transmitting section with a smartphone camera.

*2 If the inverter fluorescent light is turned on when the room is cool, the unit may have difficulty receiving the signal from the remote controller or may not be able to operate with it; if the inverter fluorescent light is turned on when the room is warm, the unit may be able to operate with the remote controller.

C Check of indoor P.C. board and indoor fan motor

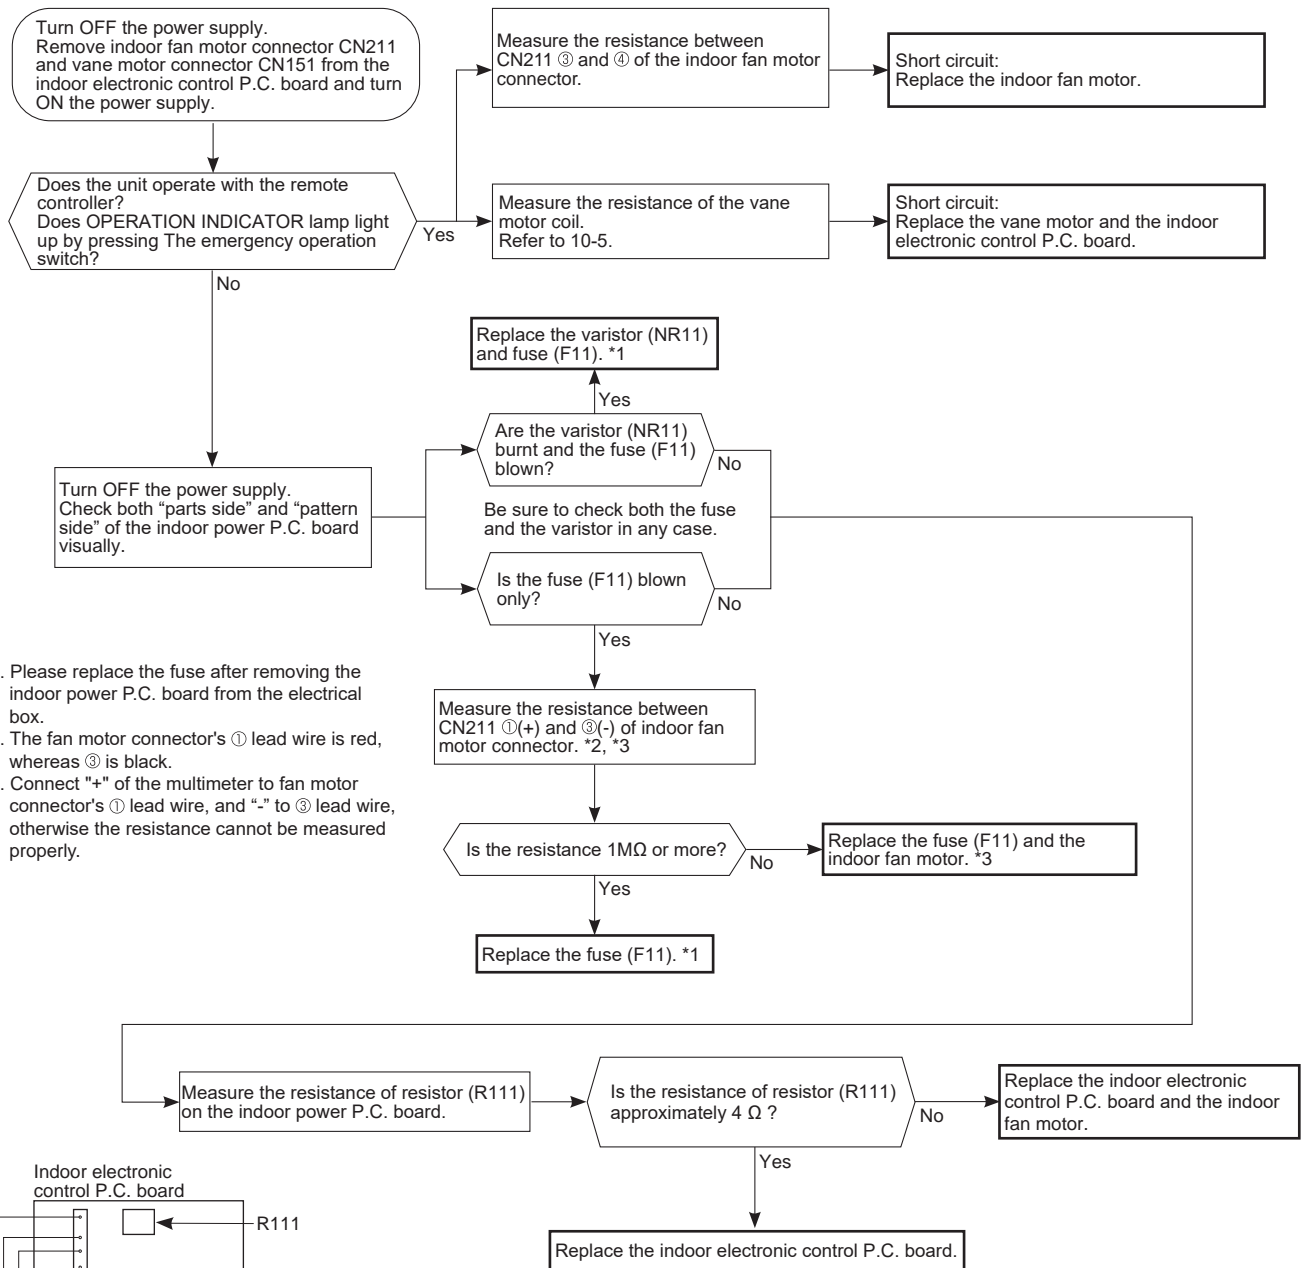


- *1. Please replace the fuse after removing the indoor power P.C. board from the electrical box.
- *2. The fan motor connector's ① lead wire is red, whereas ③ is black.
- *3. Connect "+" of the multimeter to fan motor connector's ① lead wire, and "-" to ③ lead wire, otherwise the resistance cannot be measured properly.

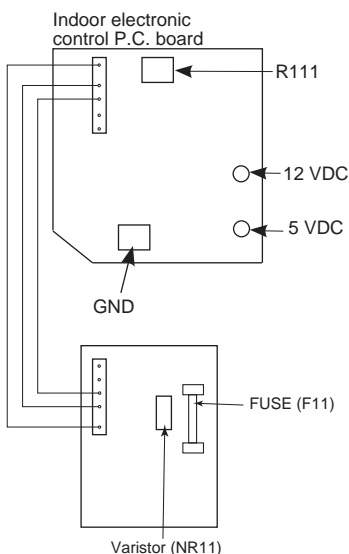

D How to check miswiring and serial signal error

MUZ Type

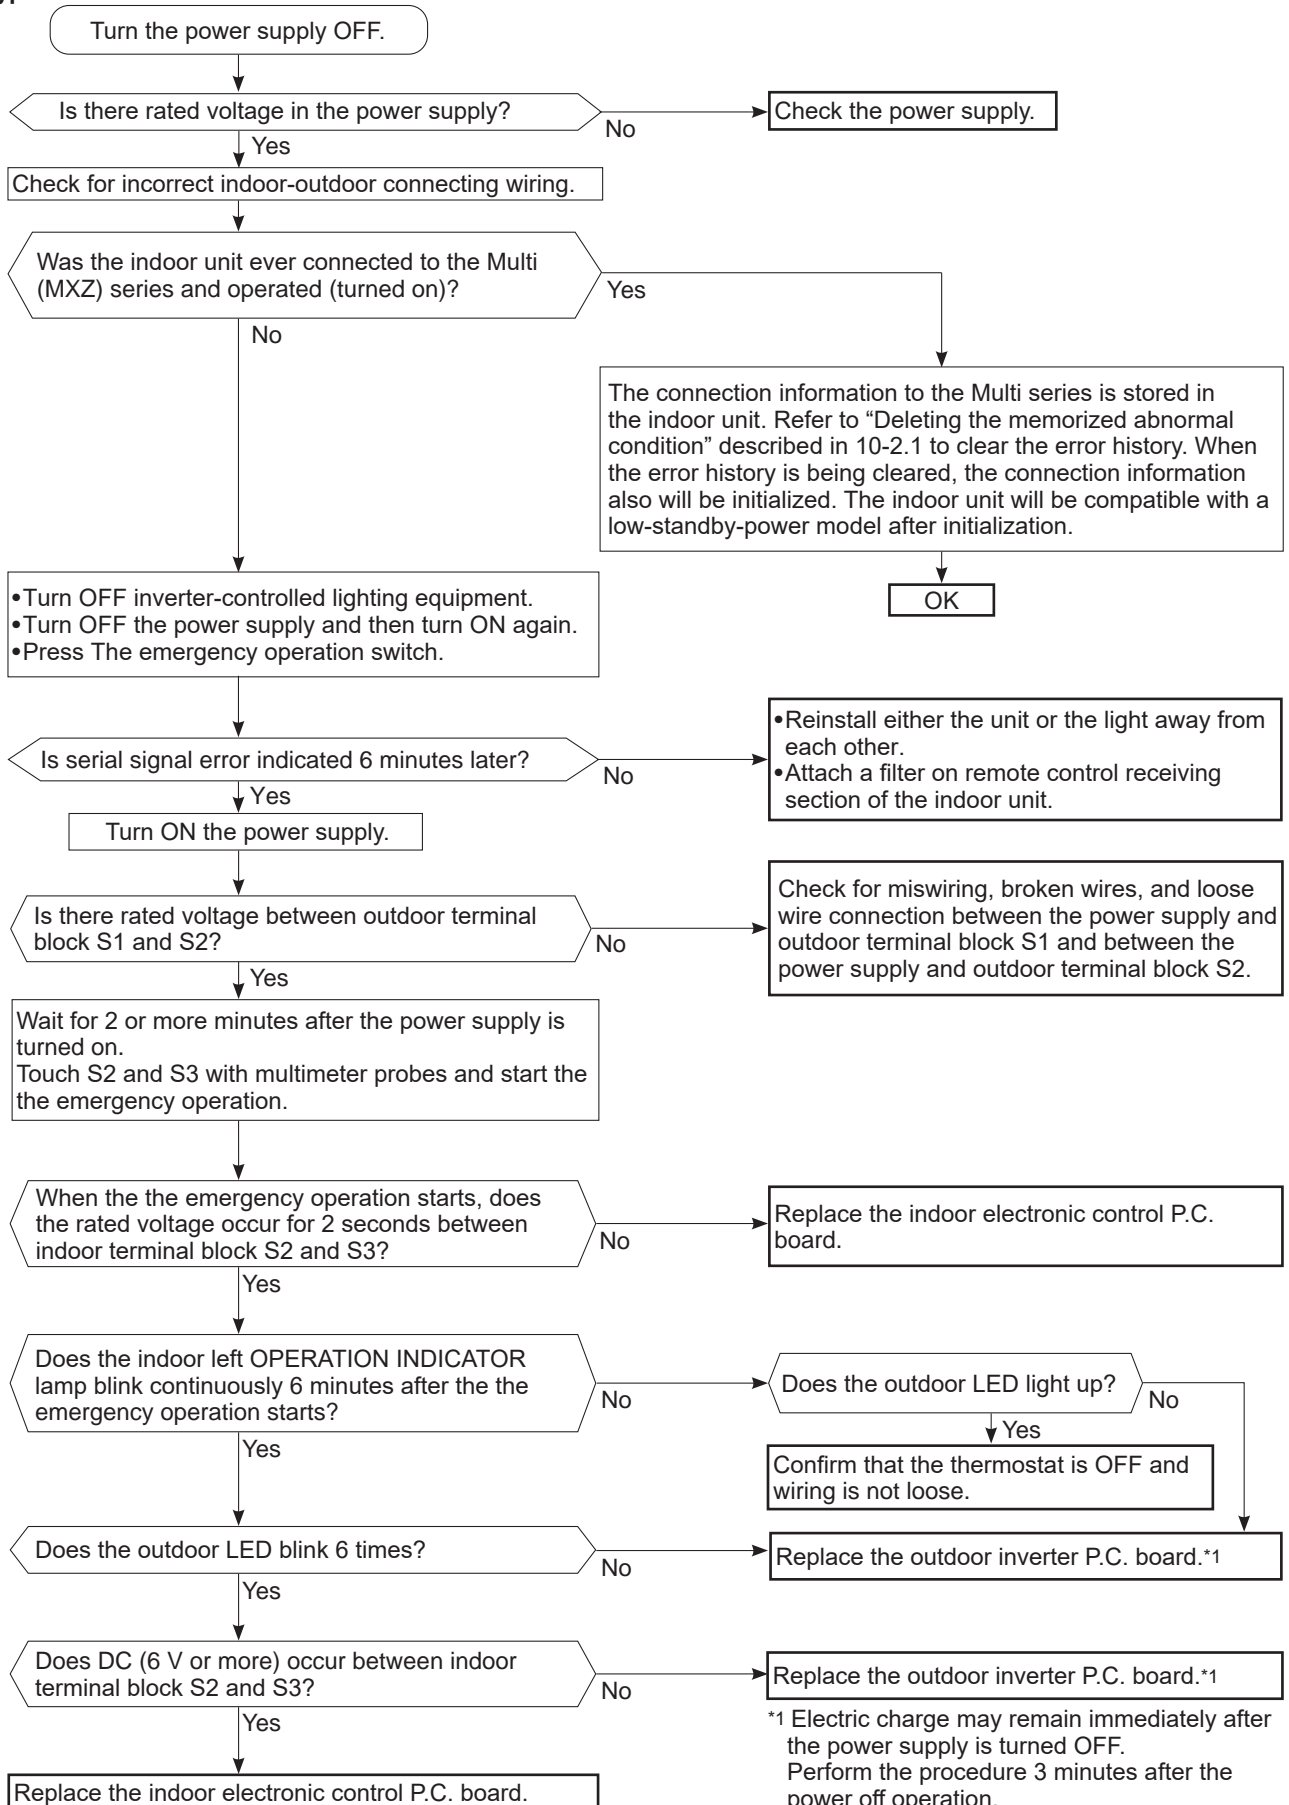

*1 Electric charge may remain immediately after the power supply is turned OFF. Perform the procedure 3 minutes after the power off operation.

MXZ Type

LED indication for communication status

Communication status is indicated by the LED.

Unit status


Blinking: normal communication

Lighting: abnormal communication or not connected


Pattern 1 and 2 is repeatedly displayed alternately. Each pattern is displayed for 10 seconds.

NOTE: "Lighting" in the table below does not indicate abnormal communication.


Outdoor control P.C. board



Pattern	LED 1	LED 2	LED 3
1	Unit A status	Unit B status	Lit
2	Unit C status	Unit D status	Not lit
3	Unit E status	—	Blinking

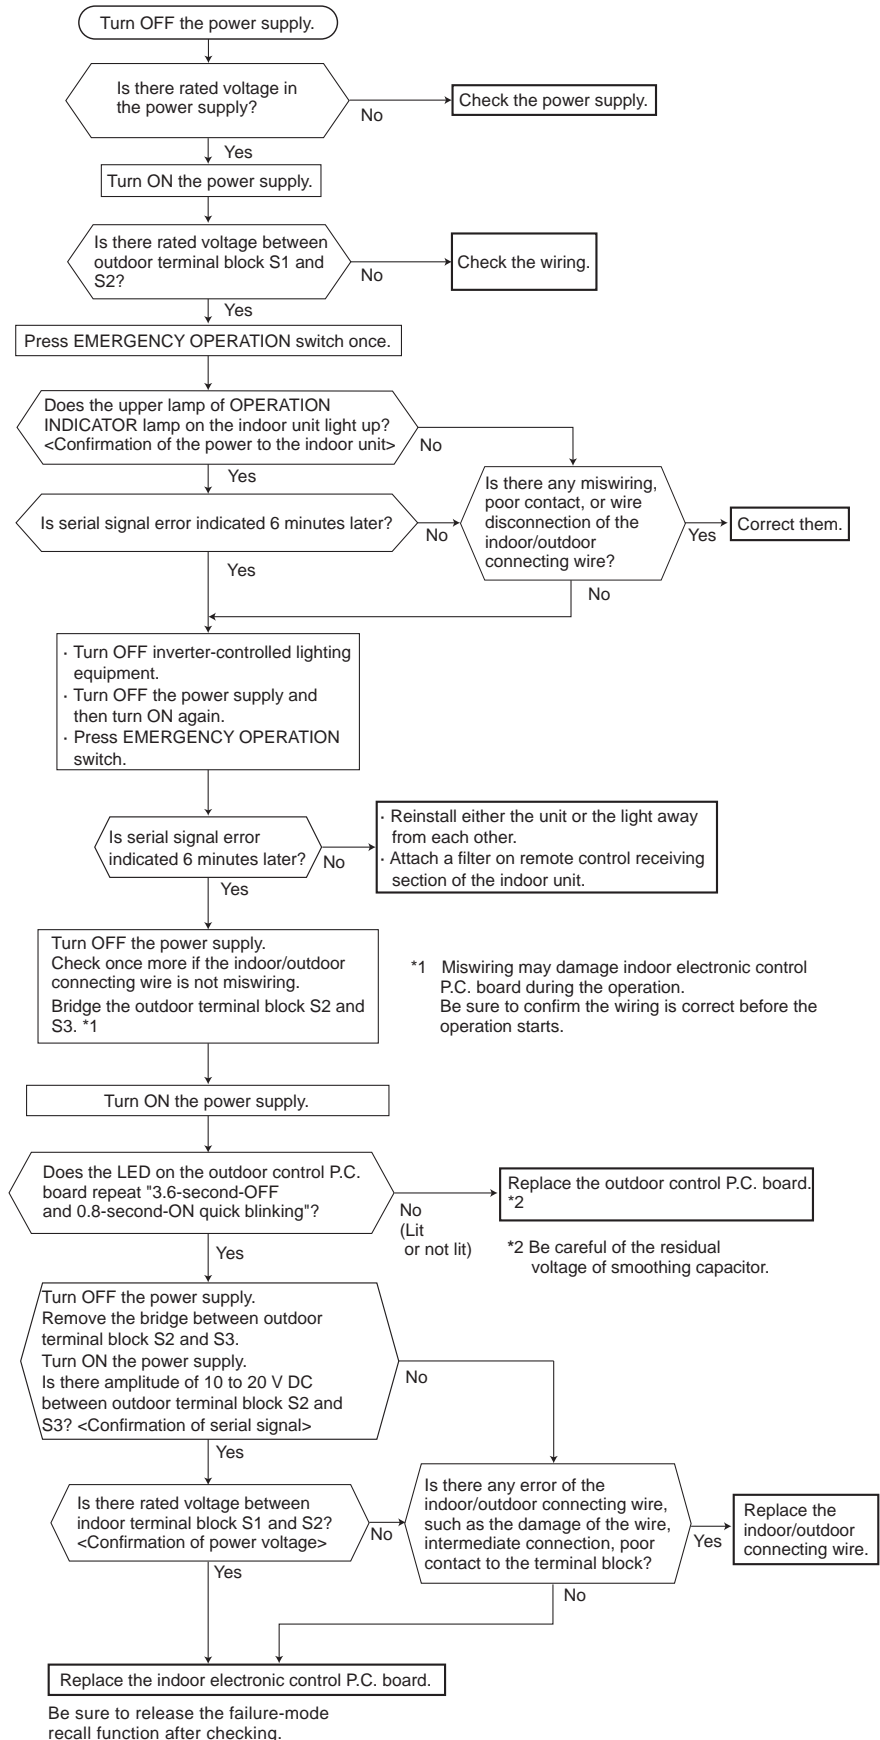

E Electromagnetic noise enters into TV sets or radios

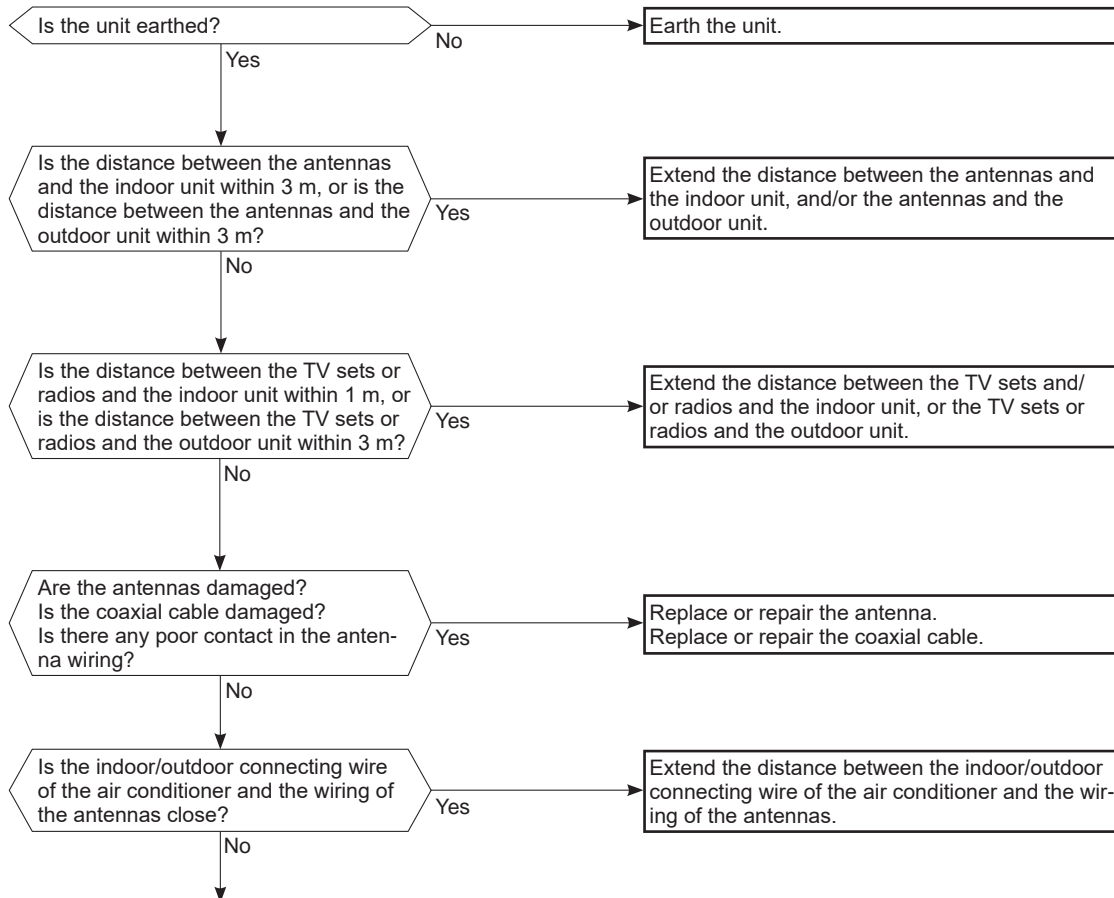

10-7. TEST POINT DIAGRAM AND VOLTAGE

1. Indoor electronic control P.C. board, indoor terminal P.C. board and power monitor receiver SW P.C. board



MSZ-BT20VG - [E1], [ER1], [ET1], [E2], [ER2], [ET2] **MSZ-BT20VGK** - [E1], [ET1], [E2], [ET2], [ER1]

MSZ-BT25VG - [E1], [ER1], [ET1], [E2], [ER2], [ET2] **MSZ-BT25VGK** - [E1], [ET1], [E2], [ET2], [ER1]

MSZ-BT35VG - [E1], [ER1], [ET1], [E2], [ER2], [ET2] **MSZ-BT35VGK** - [E1], [ET1], [E2], [ET2], [ER1]

MSZ-BT50VG - [E1], [ER1], [ET1], [E2], [ER2], [ET2] **MSZ-BT50VGK** - [E1], [ET1], [E2], [ET2], [ER1]

Indoor electronic control P.C. board

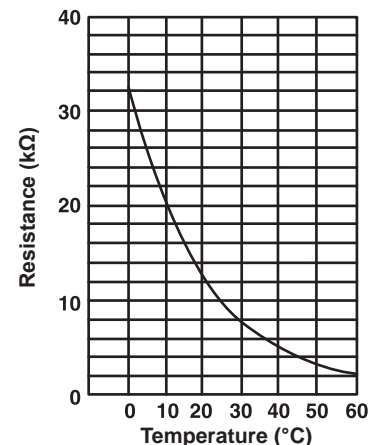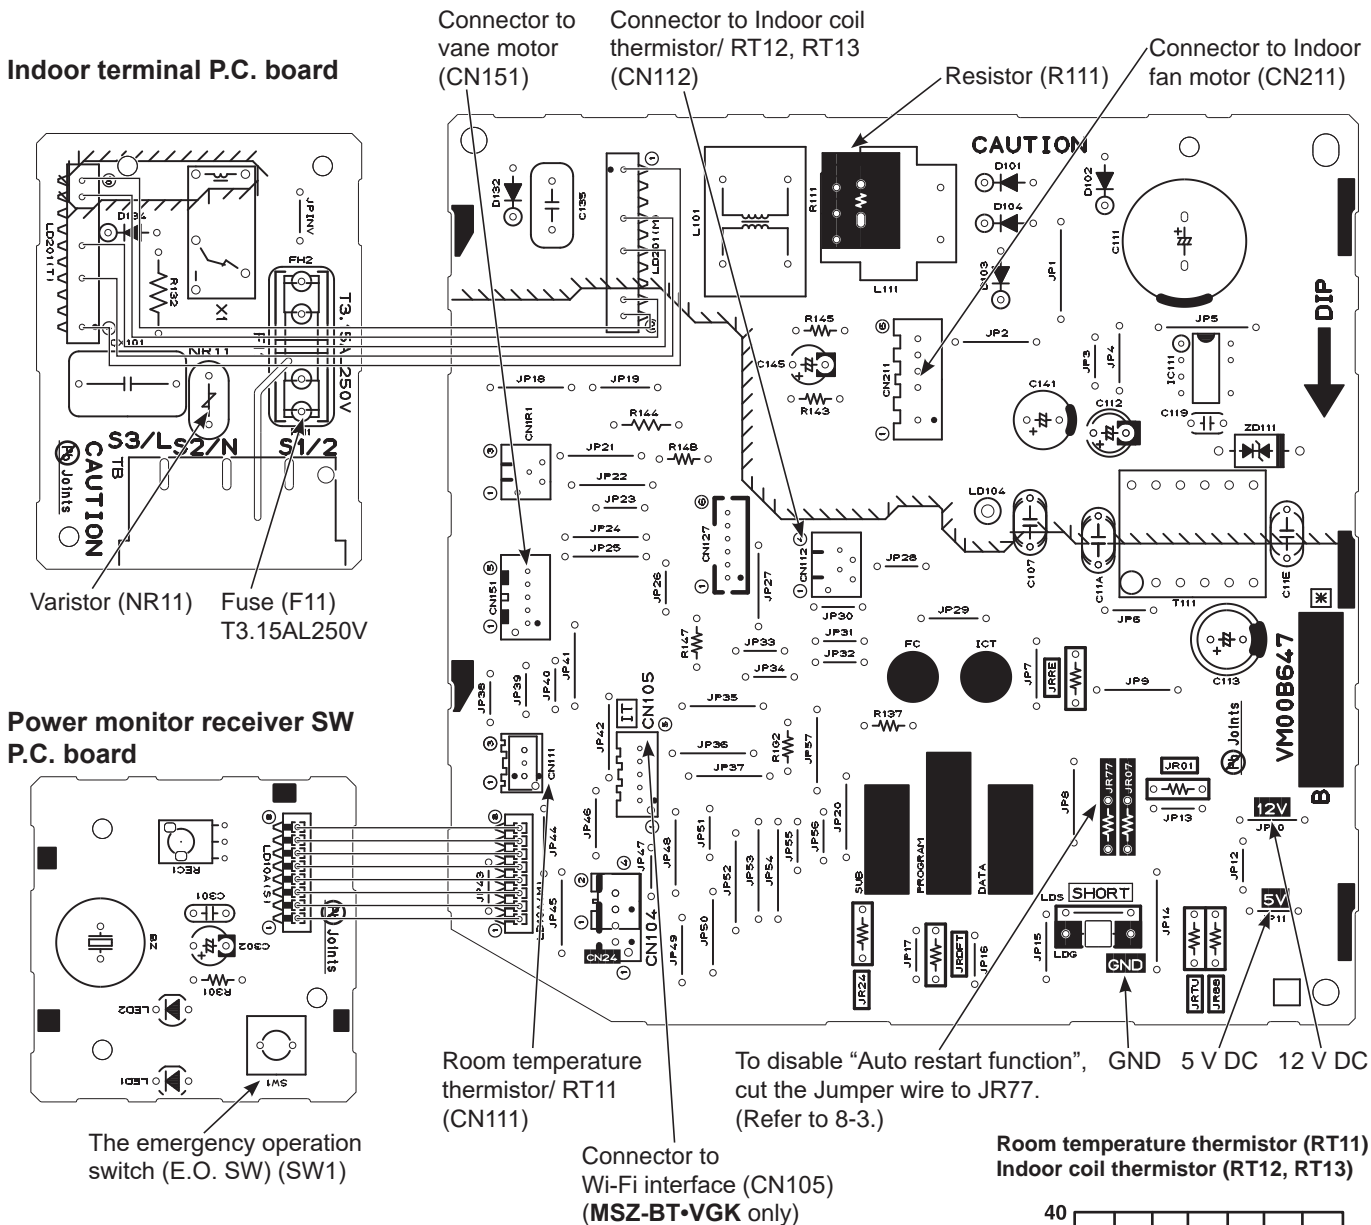


MSZ-BT20VG - E3, ER3, ET3
 MSZ-BT25VG - E3, ER3, ET3
 MSZ-BT35VG - E3, ER3, ET3
 MSZ-BT50VG - E3, ER3, ET3


MSZ-BT20VGK - E3, ER2, ET3
 MSZ-BT25VGK - E3, ER2, ET3
 MSZ-BT35VGK - E3, ER2, ET3
 MSZ-BT50VGK - E3, ER2, ET3

Indoor electronic control P.C. board

Indoor terminal P.C. board

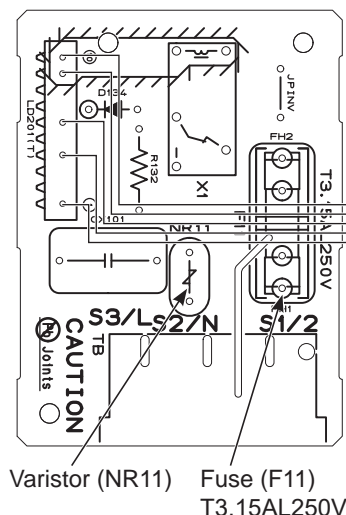

Power monitor receiver SW P.C. board

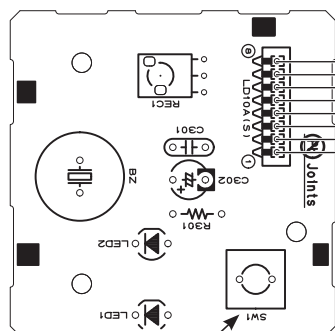


Connector to vane motor (CN151)


Connector to Indoor coil thermistor/ RT12, RT13 (CN112)

Connector to Indoor fan motor (CN211)

Resistor (R111)

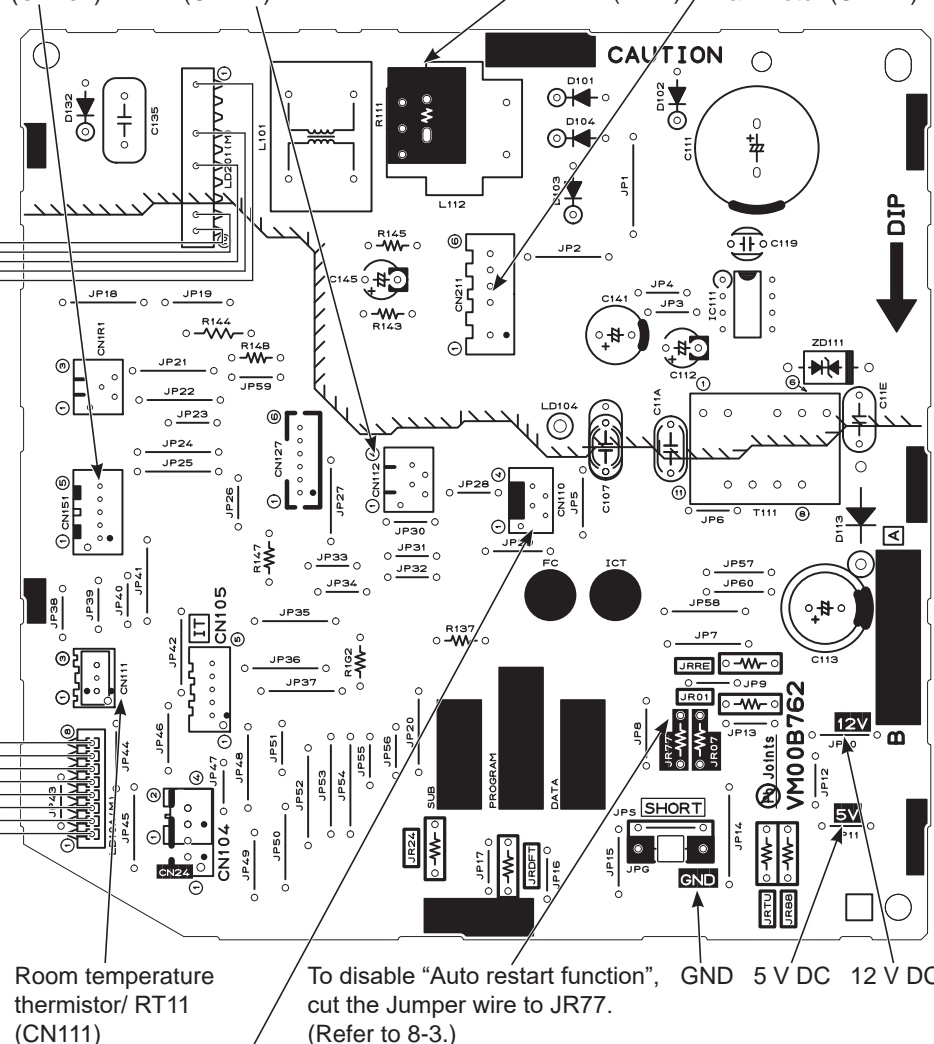

Room temperature thermistor (RT11)
 Indoor coil thermistor (RT12, RT13)

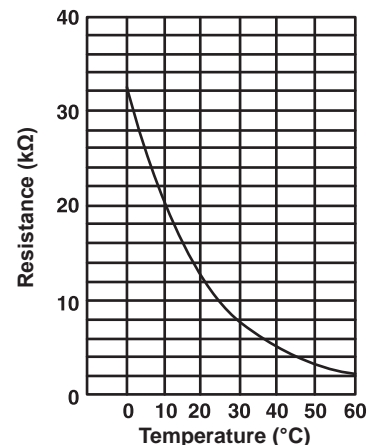

<Detaching method of the terminal with locking mechanism>


The terminal which has the locking mechanism can be detached as shown below.

There are 2 types of the terminal with locking mechanism.


The terminal without locking mechanism can be detached by pulling it out.

Check the shape of the terminal before detaching.

- (1) Slide the sleeve and check if there is a locking lever or not.

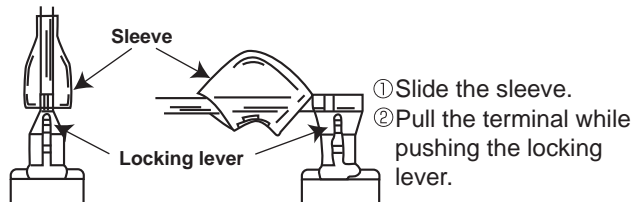

- (2) The terminal with this connector shown below has the locking mechanism.

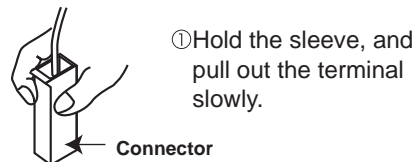

11-1. MSZ-BT20VG MSZ-BT25VG MSZ-BT35VG MSZ-BT50VG

NOTE: Turn OFF the power supply before disassembly.

—>: Indicates the visible parts in the photos/figures.
--->: Indicates the invisible parts in the photos/figures.

OPERATING PROCEDURE	PHOTOS/FIGURES
<p>1. Removing the panel</p> <p>(1) Remove the screw caps on the panel and remove the screws of the panel.</p> <p>(2) Pull the panel slightly toward you, and then remove the panel by pushing it upward.</p>	<p>Photo 1</p> <p>Front panel</p> <p>Horizontal vane</p> <p>Screws of the panel</p>

OPERATING PROCEDURE

2. Removing the indoor terminal P.C. board, indoor electronic control P.C. board, and power monitor receiver SW P.C. board and the electrical box

<Removing the electrical box>

- (1) Remove the panel. (Refer to section 1.)
Remove the right corner box.
- (2) Remove the screw of the V.A. clamp.
Remove the V.A. clamp and the indoor/outdoor connecting wire.
- (3) Remove the screws of the electrical cover and electrical cover.
- (4) Remove the connector of the indoor coil thermistor from the indoor electronic control P.C. board.
Remove the wires of the indoor coil thermistors from the water cover, and remove the tab of the earth wire.
- (5) Remove the water cover.
- (6) Remove the following connectors from the indoor electronic control P.C. board:
CN151 (Vane motor)
CN211 (Fan motor)
- (7) Remove the upper catch of the electrical box, and pull out the electrical box.

NOTE:


To attach the electrical box, pass the wires connecting the indoor power monitor receiver SW P.C. board and the indoor electronic control P.C. board through A. Pass the lead wires of the fan motor through B as shown in the Photo 3.

<Removing the indoor terminal P.C. board, indoor electronic control P.C. board, and power monitor receiver SW P.C. board>

- (8) Remove the screw of the terminal block and remove the earth wire connected to the electrical box from the indoor electronic control P.C. board.
- (9) Remove the display receiver P.C. board holder from the electrical box.
- (10) Unhook the hooks of the display receiver P.C. board holder (Photo 4) and remove the power monitor receiver SW P.C. board.
- (11) Remove the room temperature thermistor from the electrical box.
Remove the indoor terminal P.C. board and the indoor electronic control P.C. board from the electrical box.

*1: Remove the insulations when replace the indoor electric control P.C. board.

Photo 4

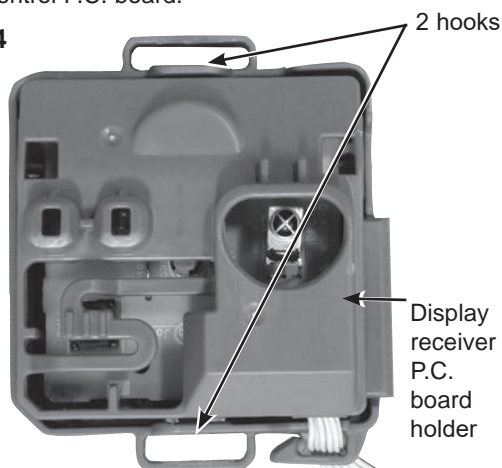

PHOTOS/FIGURES

Photo 2





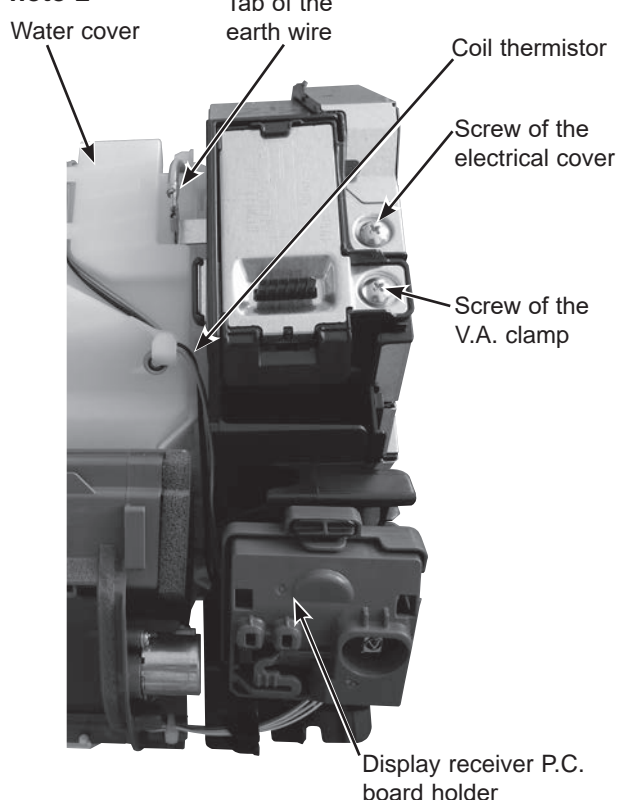


Photo 3

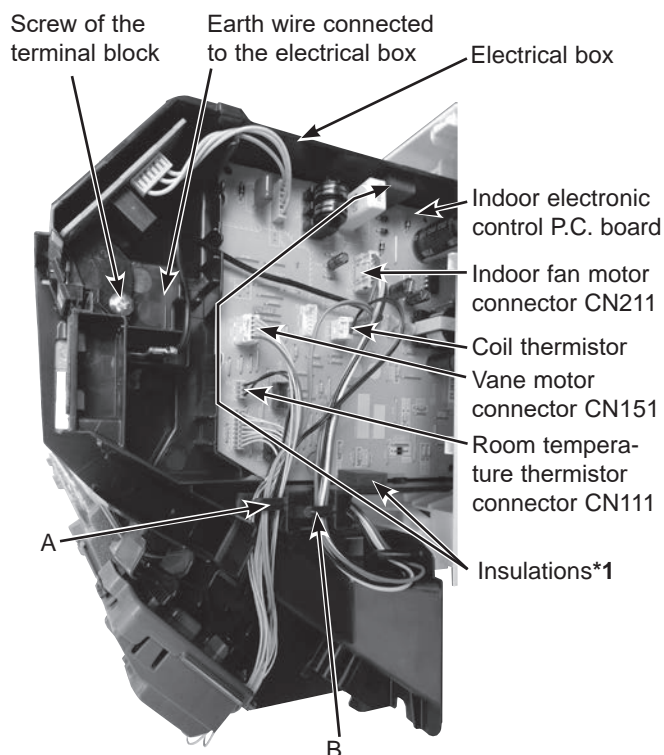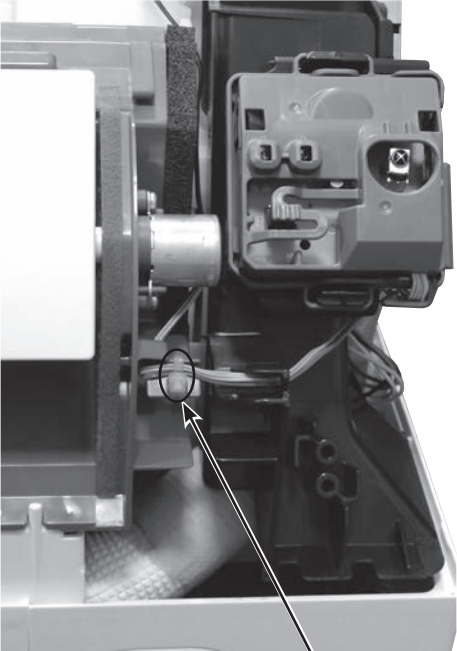

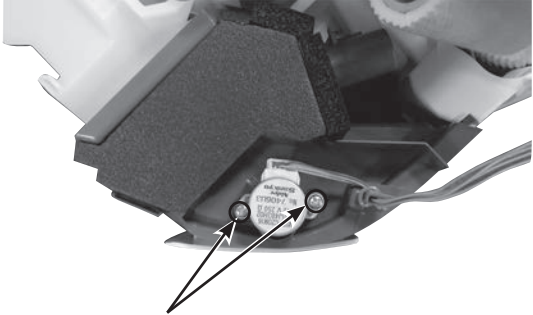

OPERATING PROCEDURE	PHOTOS/FIGURES
<p>3. Removing the nozzle assembly and the vane motor</p> <p><Removing the nozzle assembly></p> <ul style="list-style-type: none">(1) Remove the panel (Refer to section 1.) and the corner box.(2) Remove the V.A. clamp, and then the indoor/outdoor connecting wire. (Refer to section 2.)(3) Remove the electrical cover. (Refer to section 2.)(4) Disconnect the following connectors on the electronic control P.C. board: CN151 (Vane motor)(5) Pull out the drain hose from the nozzle assembly and remove the nozzle assembly. <p><Removing the vane motor></p> <ul style="list-style-type: none">(6) Cut the fixing band of the vane motor wire. (Photo 5)(7) Remove the screws of the vane motor and remove the vane motor. (Photo 6)(8) Disconnect the connector from the vane motor.	<p>Photo 5</p>  <p>Fixing band of the vane motor wire</p> <p>Photo 6</p>  <p>Screws of the vane motor</p>

OPERATING PROCEDURE

4. Removing the indoor fan motor, the indoor coil thermistor and the line flow fan

- (1) Remove the panel. (Refer to section 1.)
Remove the corner box.
- (2) Remove the electrical box and the nozzle assembly.
(Refer to section 2,3.)
- (3) Remove the screws fixing the motor bed.
- (4) Loosen the screw fixing the line flow fan.
- (5) Remove the motor bed together with the indoor fan motor and the motor band.
- (6) Disconnect the lead wire of the fan motor from the motor band.
- (7) Disengage the hooks of the motor band and remove the motor band. Pull out the indoor fan motor.
- (8) Remove the indoor coil thermistor from the heat exchanger.
* Install the indoor coil thermistor in its former position when assembling it.
- (9) Remove the screws fixing the left side of the heat exchanger.
- (10) Lift the heat exchanger, and pull out the line flow fan to the lower-left.
* When attaching the line flow fan, screw the line flow fan so 4 mm gap is provided between the right end of the line flow fan and the right wall of the air passage of the box (Figure 1).

Figure 1



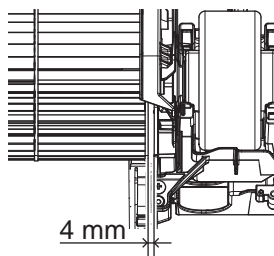


Photo 10

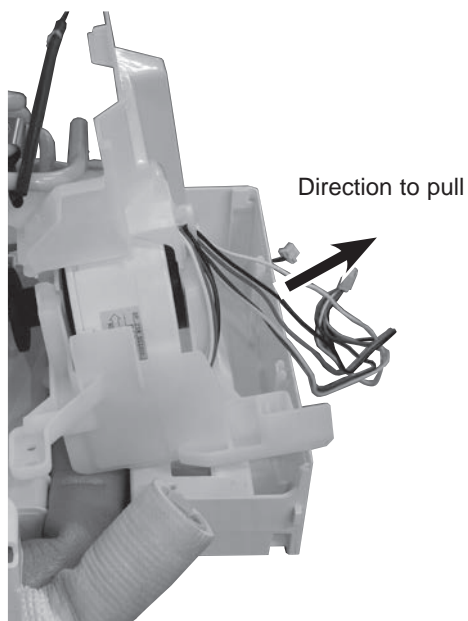

PHOTOS/FIGURES

Photo 7

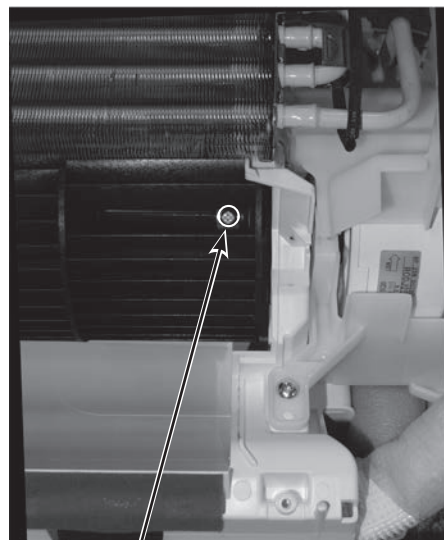

Screw of the line flow fan

Photo 8






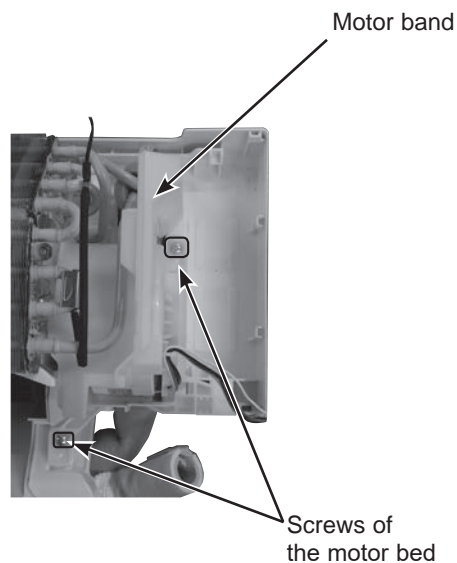


Photo 9

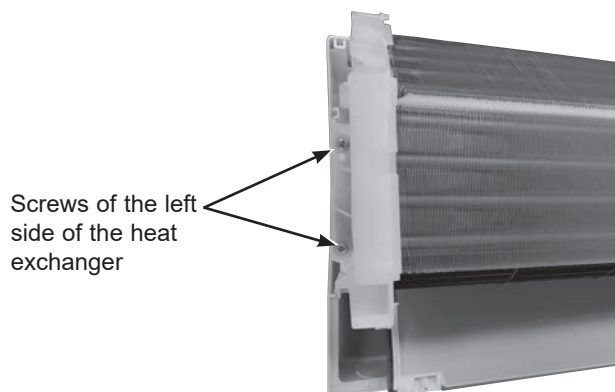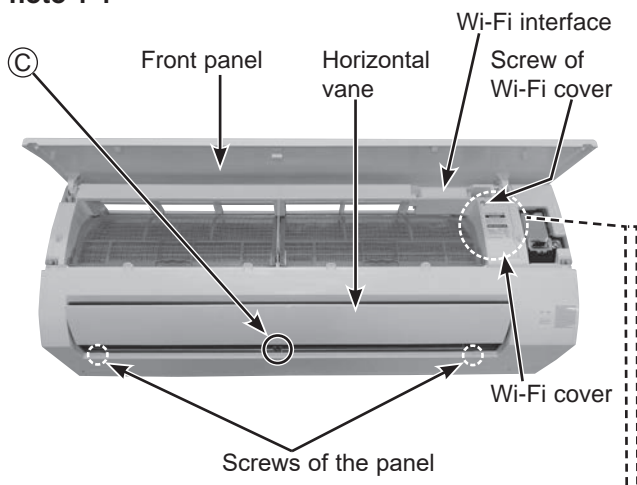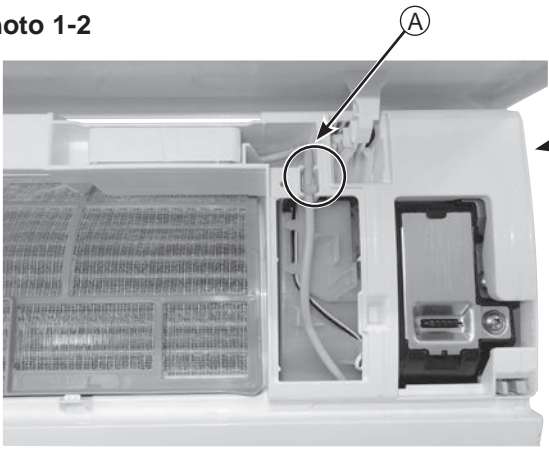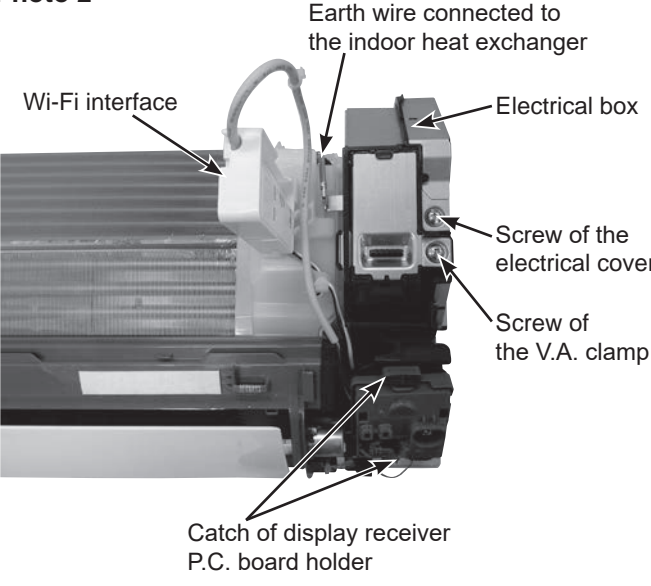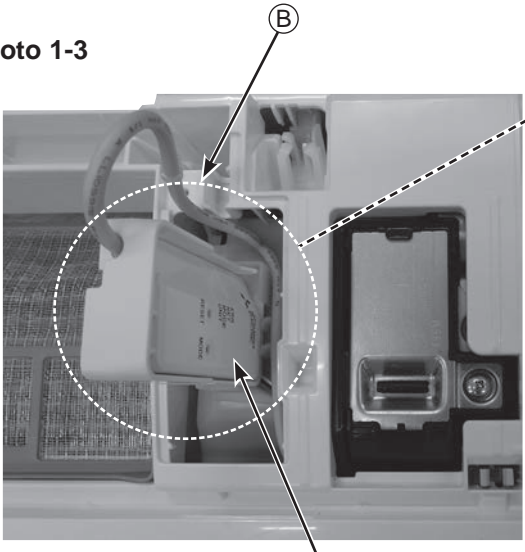

11-2. MSZ-BT20VGK MSZ-BT25VGK MSZ-BT35VGK MSZ-BT50VGK

NOTE: Turn OFF the power supply before disassembly.

OPERATING PROCEDURE	PHOTOS/FIGURES
<p>1. Removing the panel</p> <ol style="list-style-type: none"> (1) Remove the front panel. (2) Remove the screw caps of the panel. Remove the screws of the panel. (3) Remove the screw of the Wi-Fi cover on the upper right of the panel, and remove the Wi-Fi cover. (4) Remove the Wi-Fi interface on the right side of the panel. Pull out the Wi-Fi cable, and pull out the cable tie fixed on the panel. (A) (5) Insert Wi-Fi interface into the water cut (B) in the same direction as Photo 1-3, and fix it temporary. (6) Unhook the lower part (C) of the panel. (7) First, hold the lower part of the right end of the panel, and hold the lower part of the left end of the panel. (8) Pull the panel slightly toward you, and then remove the panel by pushing it upward. 	<p>Photo 1-1</p> 
<p>2. Removing the Wi-Fi interface</p> <ol style="list-style-type: none"> (1) Remove the panel (Refer to section 1.) and the corner box right. (2) Remove the screw of the V.A. clamp. Remove the V.A. clamp and the indoor/outdoor connecting wire. (3) Remove the screw of the electrical cover, and remove the electrical cover. (4) Disconnect the following connector (Photo 3-2): <Indoor electronic control P.C. board> CN105 (Wi-Fi interface) (E1, ET1, E2, ET2, ER1 model) CN110 (Wi-Fi interface) (E3, ER2, ET3 model) (5) Remove the lead wire of the Wi-Fi interface from the hook of the cable guide and water cut. 	<p>Photo 1-2</p> 
<p>Photo 2</p> 	<p>Photo 1-3</p> 

OPERATING PROCEDURE

3. Removing the indoor electrical box

- (1) Remove the panel (Refer to section 1.) and the corner box right.
- (2) Remove the screw of the V.A. clamp.
Remove the V.A. clamp and the indoor/outdoor connecting wire.
- (3) Remove the earth wire connected to the indoor heat exchanger from the electrical box.
- (4) Remove the screw of the electrical cover and remove the electrical cover.
- (5) Disconnect following connectors:
<Indoor electronic control P.C. board>
CN151 (Vane motor)
CN105 (Wi-Fi interface) (E1, ET1, E2, ET2, ER1 model)
CN110 (Wi-Fi interface) (E3, ER2, ET3 model)
<Indoor power P.C. board>
CN211 (Indoor fan motor)
- (6) Remove the lead wire of the Wi-Fi interface, and remove the Wi-Fi interface (Refer to section 2.).
- (7) Unhook the upper and lower catch of the electrical box, and pull out the electrical box.

NOTE:

To attach the electrical box, pass the wires connecting the indoor power monitor receiver SW P.C. board and the indoor electronic control P.C. board through A. Pass the lead wires of the fan motor through B as shown in the Photo 3-1.

PHOTOS/FIGURES

Photo 3-1

(E1, ET1, E2, ET2, ER1 model)

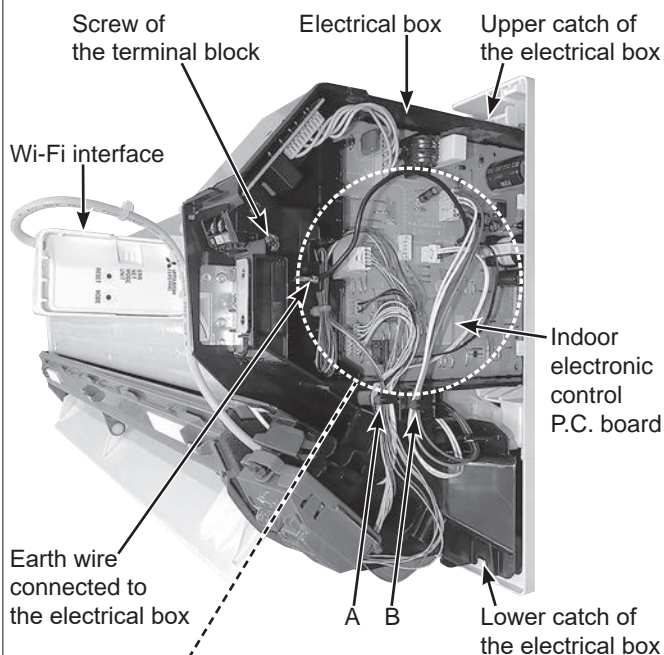


Photo 3-2 (E1, ET1, E2, ET2, ER1 model)

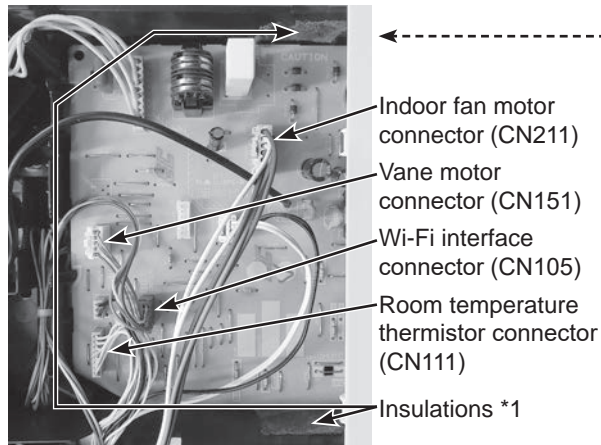


Photo 3-1

(E3, ER2, ET3 model)


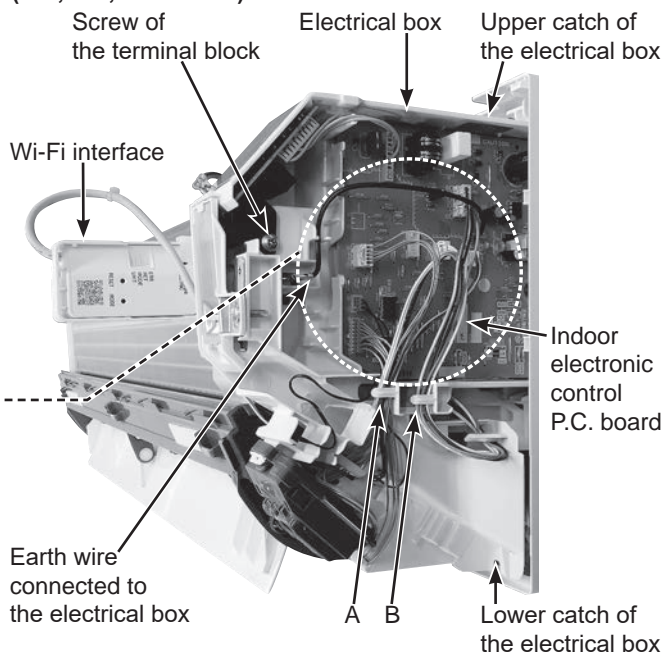


Photo 3-2 (E3, ER2, ET3 model)

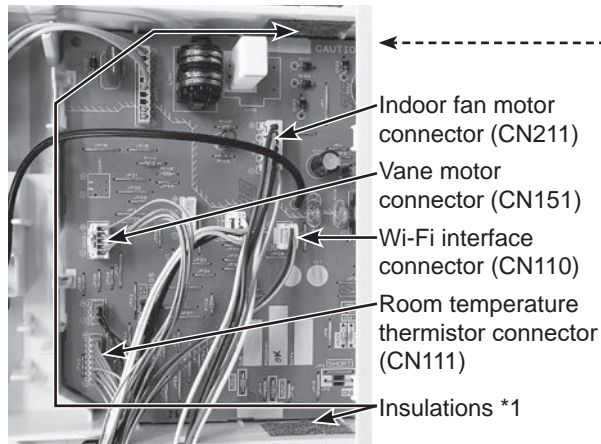

OPERATING PROCEDURE

4. Removing the indoor terminal P.C. board, indoor electronic control P.C. board, and power monitor receiver SW P.C. board

- (1) Remove the panel (Refer to Section 1.) and the corner box right.
- (2) Remove the screw of the V.A. clamp. Remove the V.A. clamp and the indoor/outdoor connecting wire. (Refer to section 2.)
- (3) Remove the Wi-Fi interface and indoor electrical box (Refer to section 2 and 3.).
- (4) Remove the screw of the terminal block and remove the earth wire connected to the electrical box from the indoor electronic control P.C. board (Refer to section 3.).
- (5) Remove the display receiver P.C. board holder from the electrical box.
- (6) Unhook the hooks of the display receiver P.C. board holder (Photo 4) and remove the power monitor receiver SW P.C. board.
- (7) Remove the room temperature thermistor from the electrical box.
Remove the indoor terminal P.C. board and the indoor electronic control P.C. board from the electrical box.

*1: Remove the insulations when replace the indoor electric control P.C. board. (Photo 3-2)

5. Removing the nozzle assembly and the vane motor

<Removing the nozzle assembly>

- (1) Remove the panel (Refer to section 1.) and the corner box.
- (2) Remove the V.A. clamp, and then the indoor/outdoor connecting wire. (Refer to section 2.)
- (3) Remove the electrical cover. (Refer to section 2.)
- (4) Disconnect the following connectors on the electronic control P.C. board:
CN151 (Vane motor)
- (5) Pull out the drain hose from the nozzle assembly and remove the nozzle assembly.

<Removing the vane motor>

- (6) Cut the fixing band of the vane motor wire. (Photo 5)
- (7) Remove the screws of the vane motor and remove the vane motor. (Photo 6)
- (8) Disconnect the connector from the vane motor.

PHOTOS/FIGURES

Photo 4

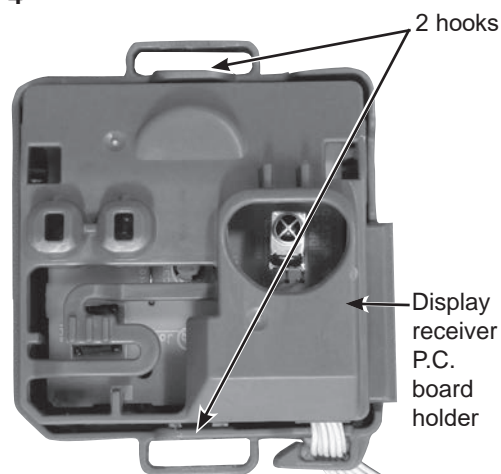


Photo 5


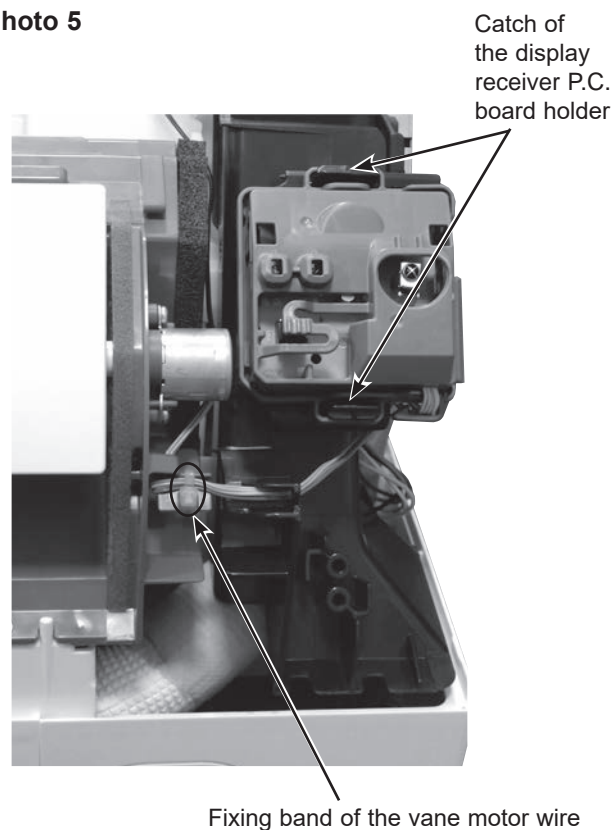


Photo 6

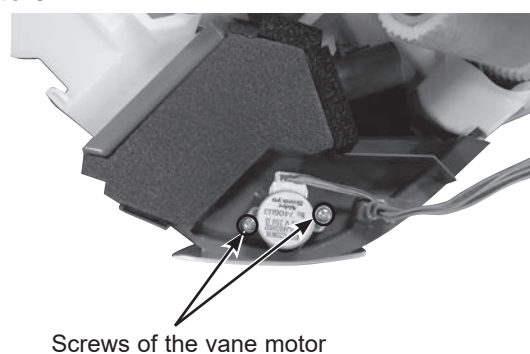


OPERATING PROCEDURE

6. Removing the indoor fan motor, the indoor coil thermistor and the line flow fan


- (1) Remove the panel. (Refer to section 1.)
Remove the corner box.
- (2) Remove the electrical box and the nozzle assembly.
(Refer to section 2,3.)
- (3) Remove the screws fixing the motor bed.
- (4) Loosen the screw fixing the line flow fan.
- (5) Remove the motor bed together with the indoor fan motor and the motor band.
- (6) Disconnect the lead wire of the fan motor from the motor band.
- (7) Disengage the hooks of the motor band and remove the motor band. Pull out the indoor fan motor.
- (8) Remove the indoor coil thermistor from the heat exchanger.
* Install the indoor coil thermistor in its former position when assembling it.
- (9) Remove the screws fixing the left side of the heat exchanger.
- (10) Lift the heat exchanger, and pull out the line flow fan to the lower-left.
* When attaching the line flow fan, screw the line flow fan so 4 mm gap is provided between the right end of the line flow fan and the right wall of the air passage of the box (Figure 1).

Figure 1

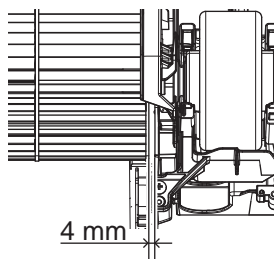


PHOTOS/FIGURES

Photo 7

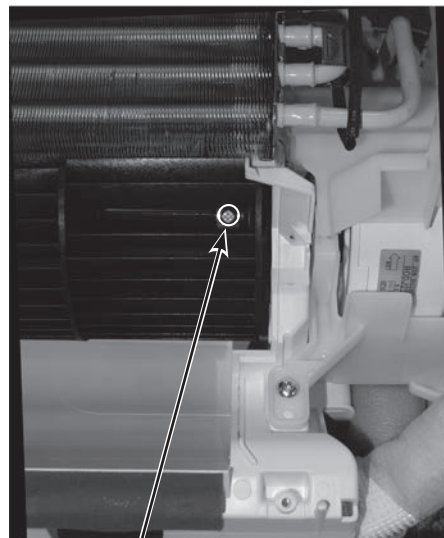

Screw of the line flow fan


Photo 8

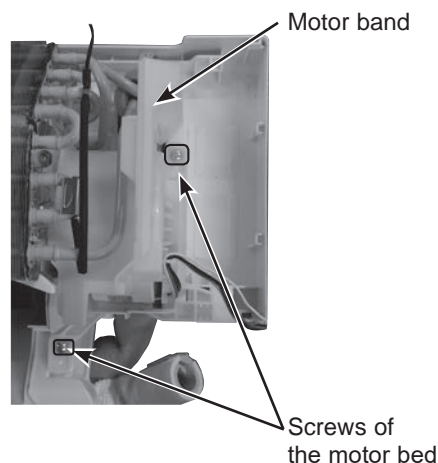

Motor band


Screws of the motor bed

Photo 10

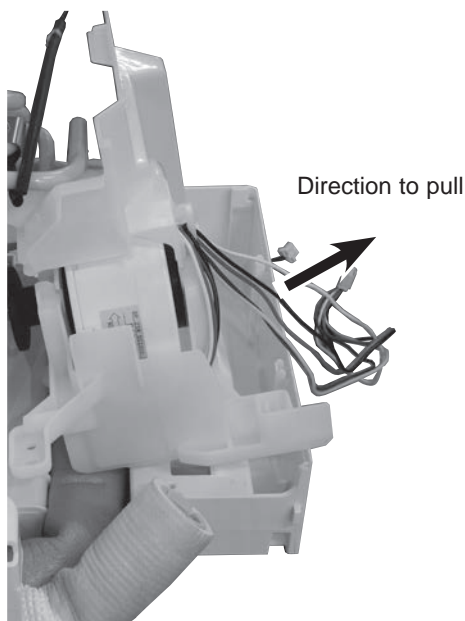

Direction to pull

Photo 9

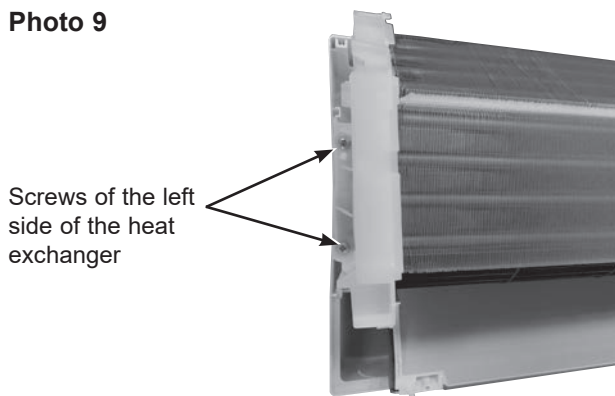

Screws of the left side of the heat exchanger

Fixing the indoor coil thermistor

*There are 2 forms of parts for fixing the indoor coil thermistor.


Clip shape



Holder shape



When fixing the indoor coil thermistor to the clip-shape/holder-shape part, the lead wire should point down.

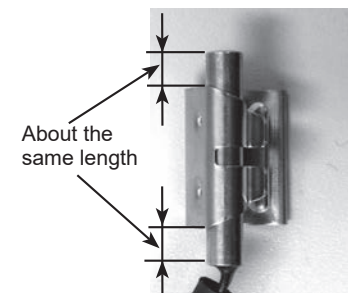

Position and procedure for mounting the clip-shape part

1. Set the indoor coil thermistor in the center of the clip-shape part.



2. Check the (marked) mounting position.



3. Mount the clip-shape part.



NOTE:

- Take care to avoid loss and accidental falling of the clip-shape part inside the unit.
- Mount the clip-shape part on the marked position.
- Do not pull the lead wire when removing the indoor coil thermistor.

mitsubishi electric corporation

HEAD OFFICE: TOKYO BUILDING, 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN

© Copyright 2019 MITSUBISHI ELECTRIC CORPORATION

Issued: Dec. 2022. No. OBH849 REVISED EDITION-G

Issued: Oct. 2022. No. OBH849 REVISED EDITION-F

Issued: Nov. 2021. No. OBH849 REVISED EDITION-E

Issued: Aug. 2021. No. OBH849 REVISED EDITION-D

Issued: Sep. 2020. No. OBH849 REVISED EDITION-C

Issued: Feb. 2020. No. OBH849 REVISED EDITION-B

Issued: Dec. 2019. No. OBH849 REVISED EDITION-A

Published: Oct. 2019. No. OBH849

Made in Japan

Specifications are subject to change without notice.